

GLADIATOR® PET WASTE STATION

PARTS LIST:

- Can (1)
- Post (1)
- Dispenser (1)
- Can Bracket (2)
- Sign/Sign Bracket (1)
- Dispenser Keys (2)
- 400 Free Bags
- Free Can Liners
- Hardware Pack



CAN (1)




DISPENSER (1)
(Zero Waste OR ROLL Bag)



HARDWARE



CAN BRACKET (2)

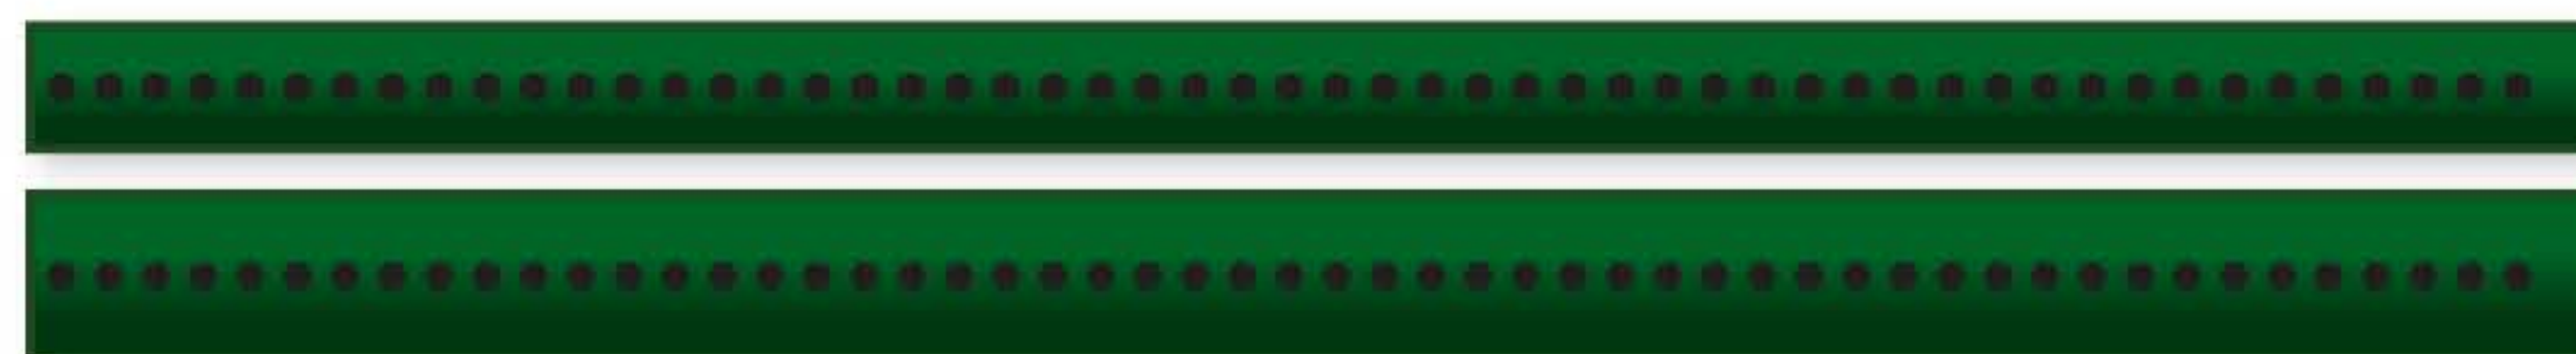

POST* (1)

*2 Post Sections 45" Each

ASSEMBLY ON REVERSE



SIGN(1) + BRACKET(1)



400 FREE BAGS



FREE CAN LINERS

NUTS & BOLTS LIST:

- 3" Bolt (3)
- A** 
- 2 1/4" Bolt (3)
- B** 
- 3/4" Bolt (6)
- C** 
- Flat Washers (12)
- D** 
- Split-Lock Washer (12)
- E** 
- Hex Nuts (8)
- F** 

THE GLADIATOR® PET WASTE STATION ASSEMBLY INSTRUCTIONS

Always check for buried services (electric, water, gas, phone, cable) before digging. Dig a post hole 18" deep. Pour in concrete. Then use one 3" bolt(A) to secure the 2 post sections together. (plus one D, E, F) The thinner post section should be inserted 6" into the larger width section. Mark assembled post 18" from thick end; bury the post to the 18" mark (in concrete).


Allow cement to firmly set-up before attaching can and dispenser to post.

Position Can 6" above ground and secure to post using the 2 brackets provided. Bolt through bracket holes directly into can (4 C, D only). Be sure to use the correct bracket for the thicker post section and the other for the thinner post section. Bolt through bracket/post cross section (2 A, D, E, F).

Next install the Dispenser 8" above the top of the Can. Be sure to place washers on the bolts as you bolt from the inside of the dispenser through to the post. Install the optional sign bracket and sign at the same time you are installing the dispenser (4 B, D, E, F).

The sign bracket is placed between the dispenser and the post. Install bolts through all FOUR holes to securely hold the sign bracket to the post. (3 C, D, E, F) + Bottom Hole shares upper dispenser bolt.

Finish by bolting the sign to the sign bracket. Details on Reverse Side.

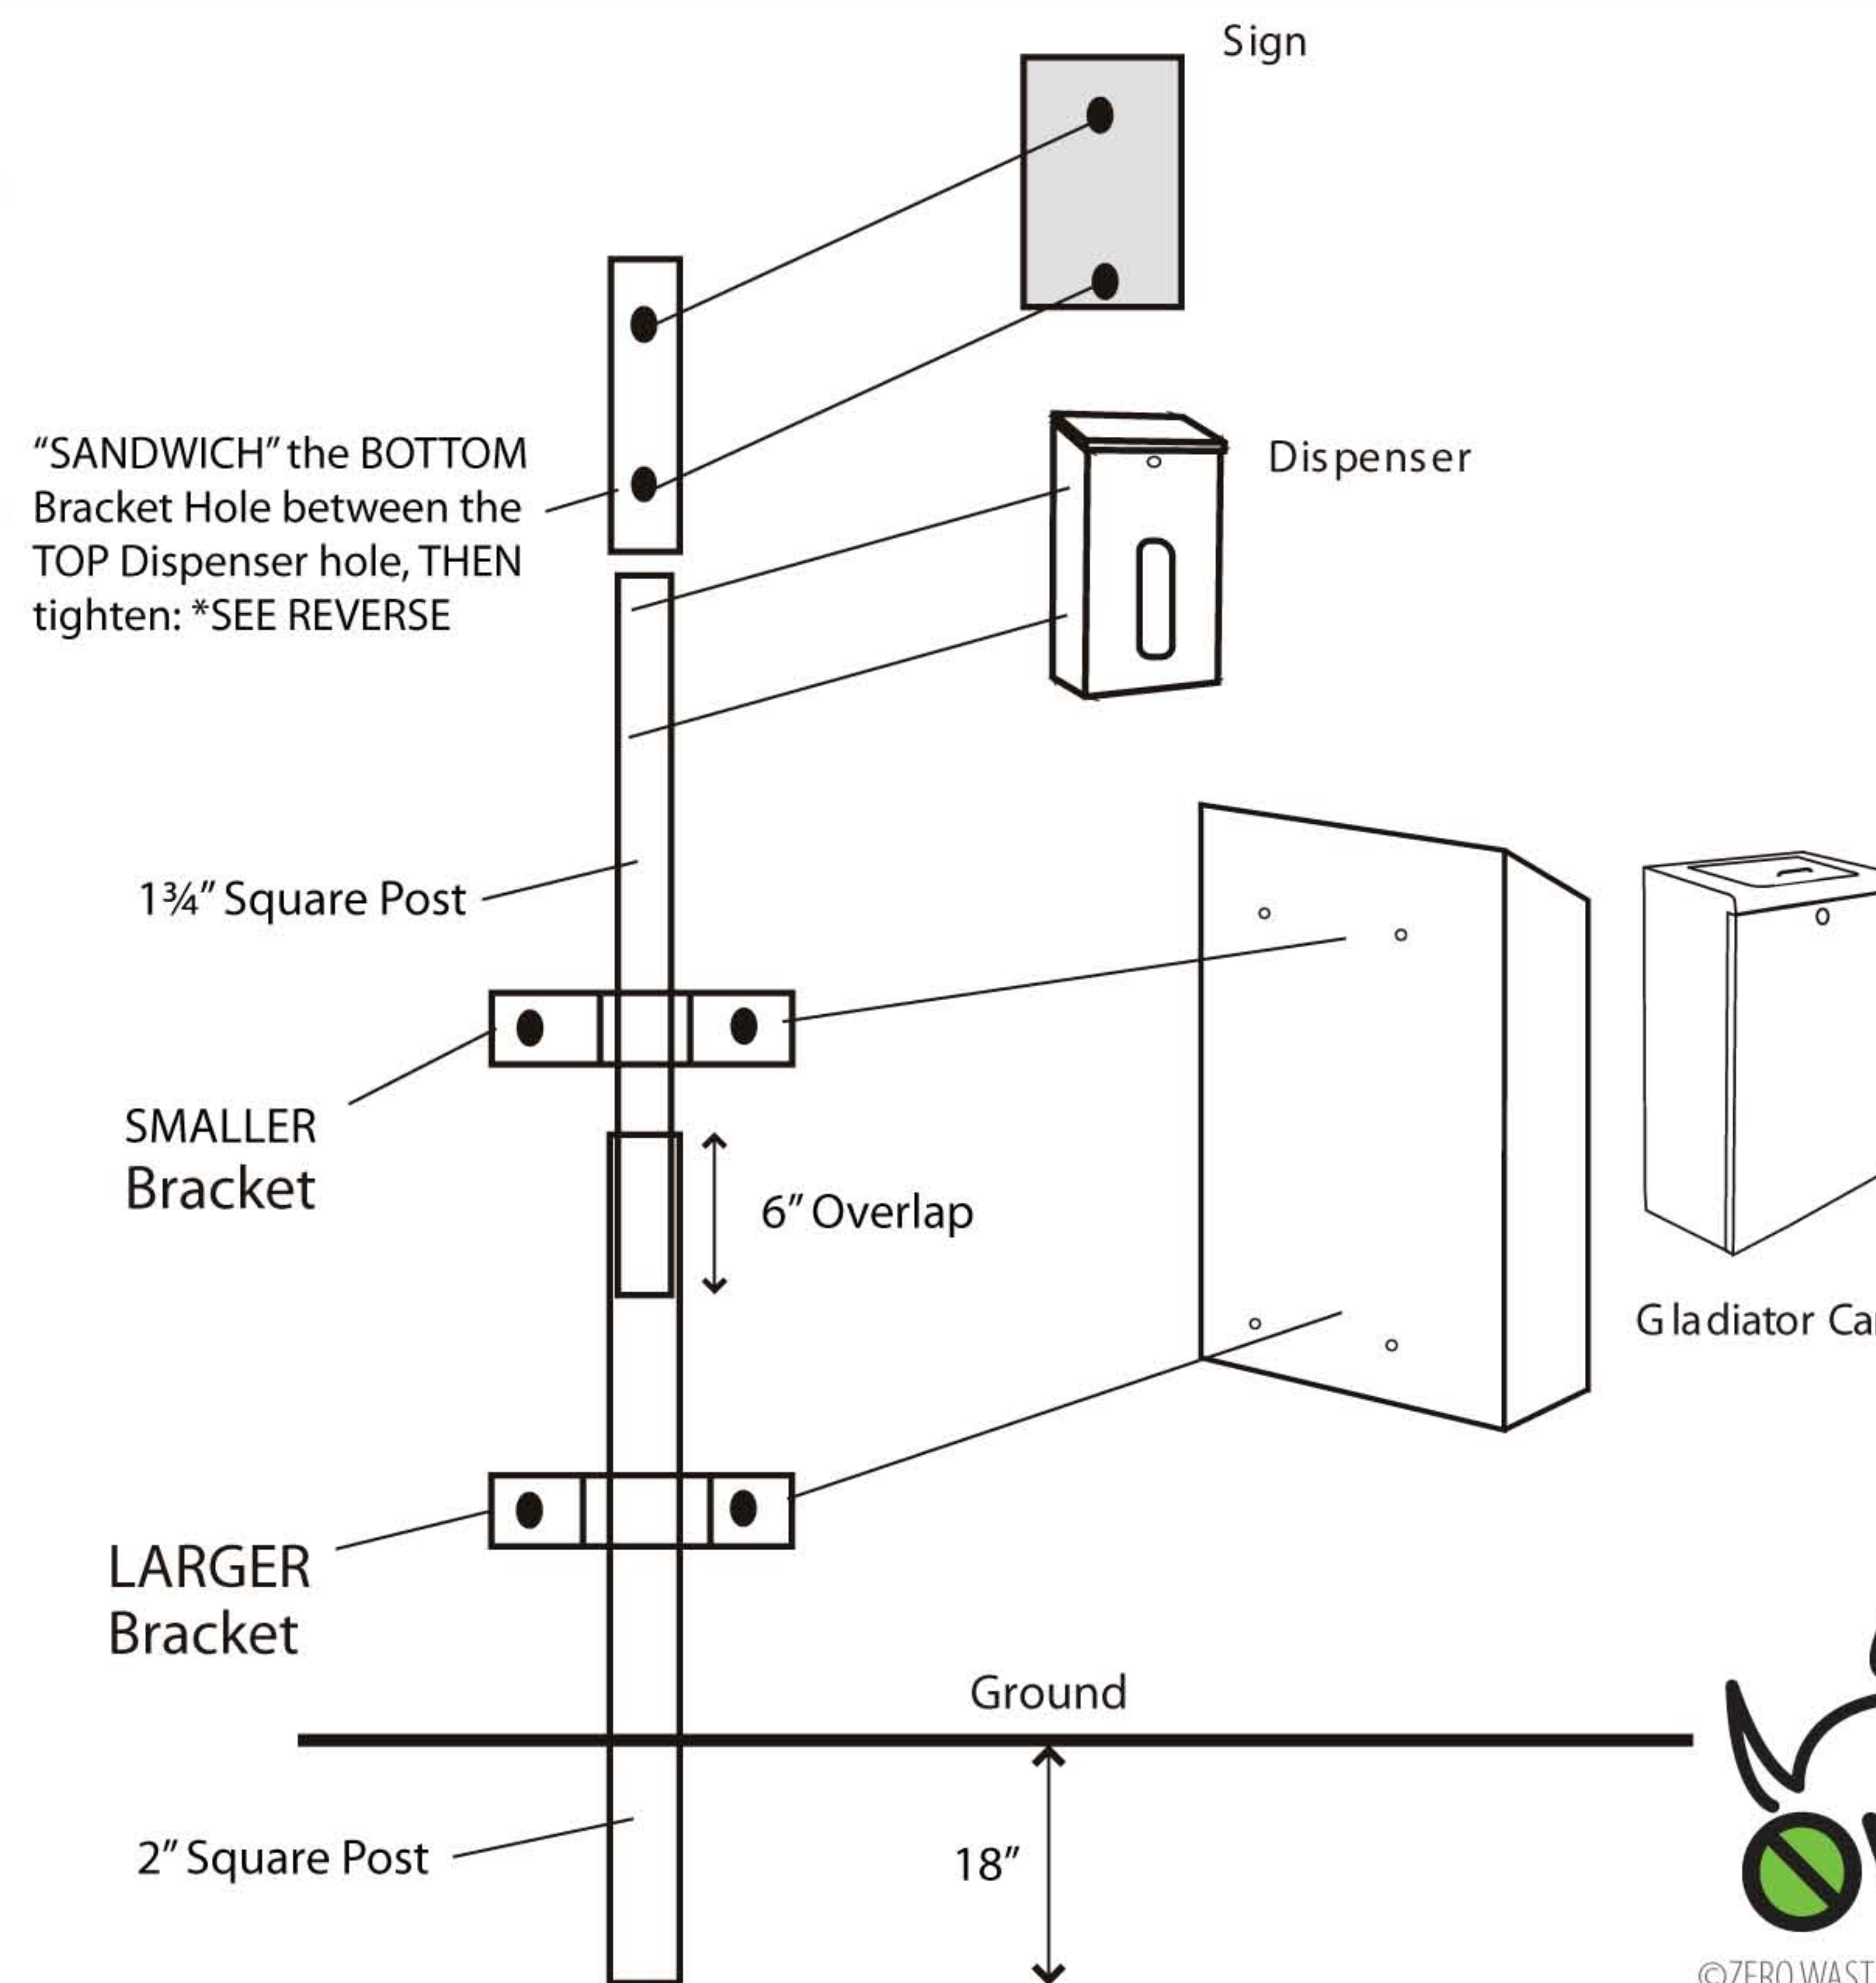

ZERO WASTE SIGN KIT

PARTS LIST:

- Sign(1)
- Sign Bracket (1)



SIGN(1)




BRACKET(1)

NUTS & BOLTS LIST:


- 1½" Bolt (3)
 - F** 
- Flat Washer (3)
 - G** 
- Split-Lock Washer (3)
 - H** 
- Hex Nuts (3)
 - I** 

SIGN KIT ASSEMBLY INSTRUCTIONS

1. Align all matching holes.

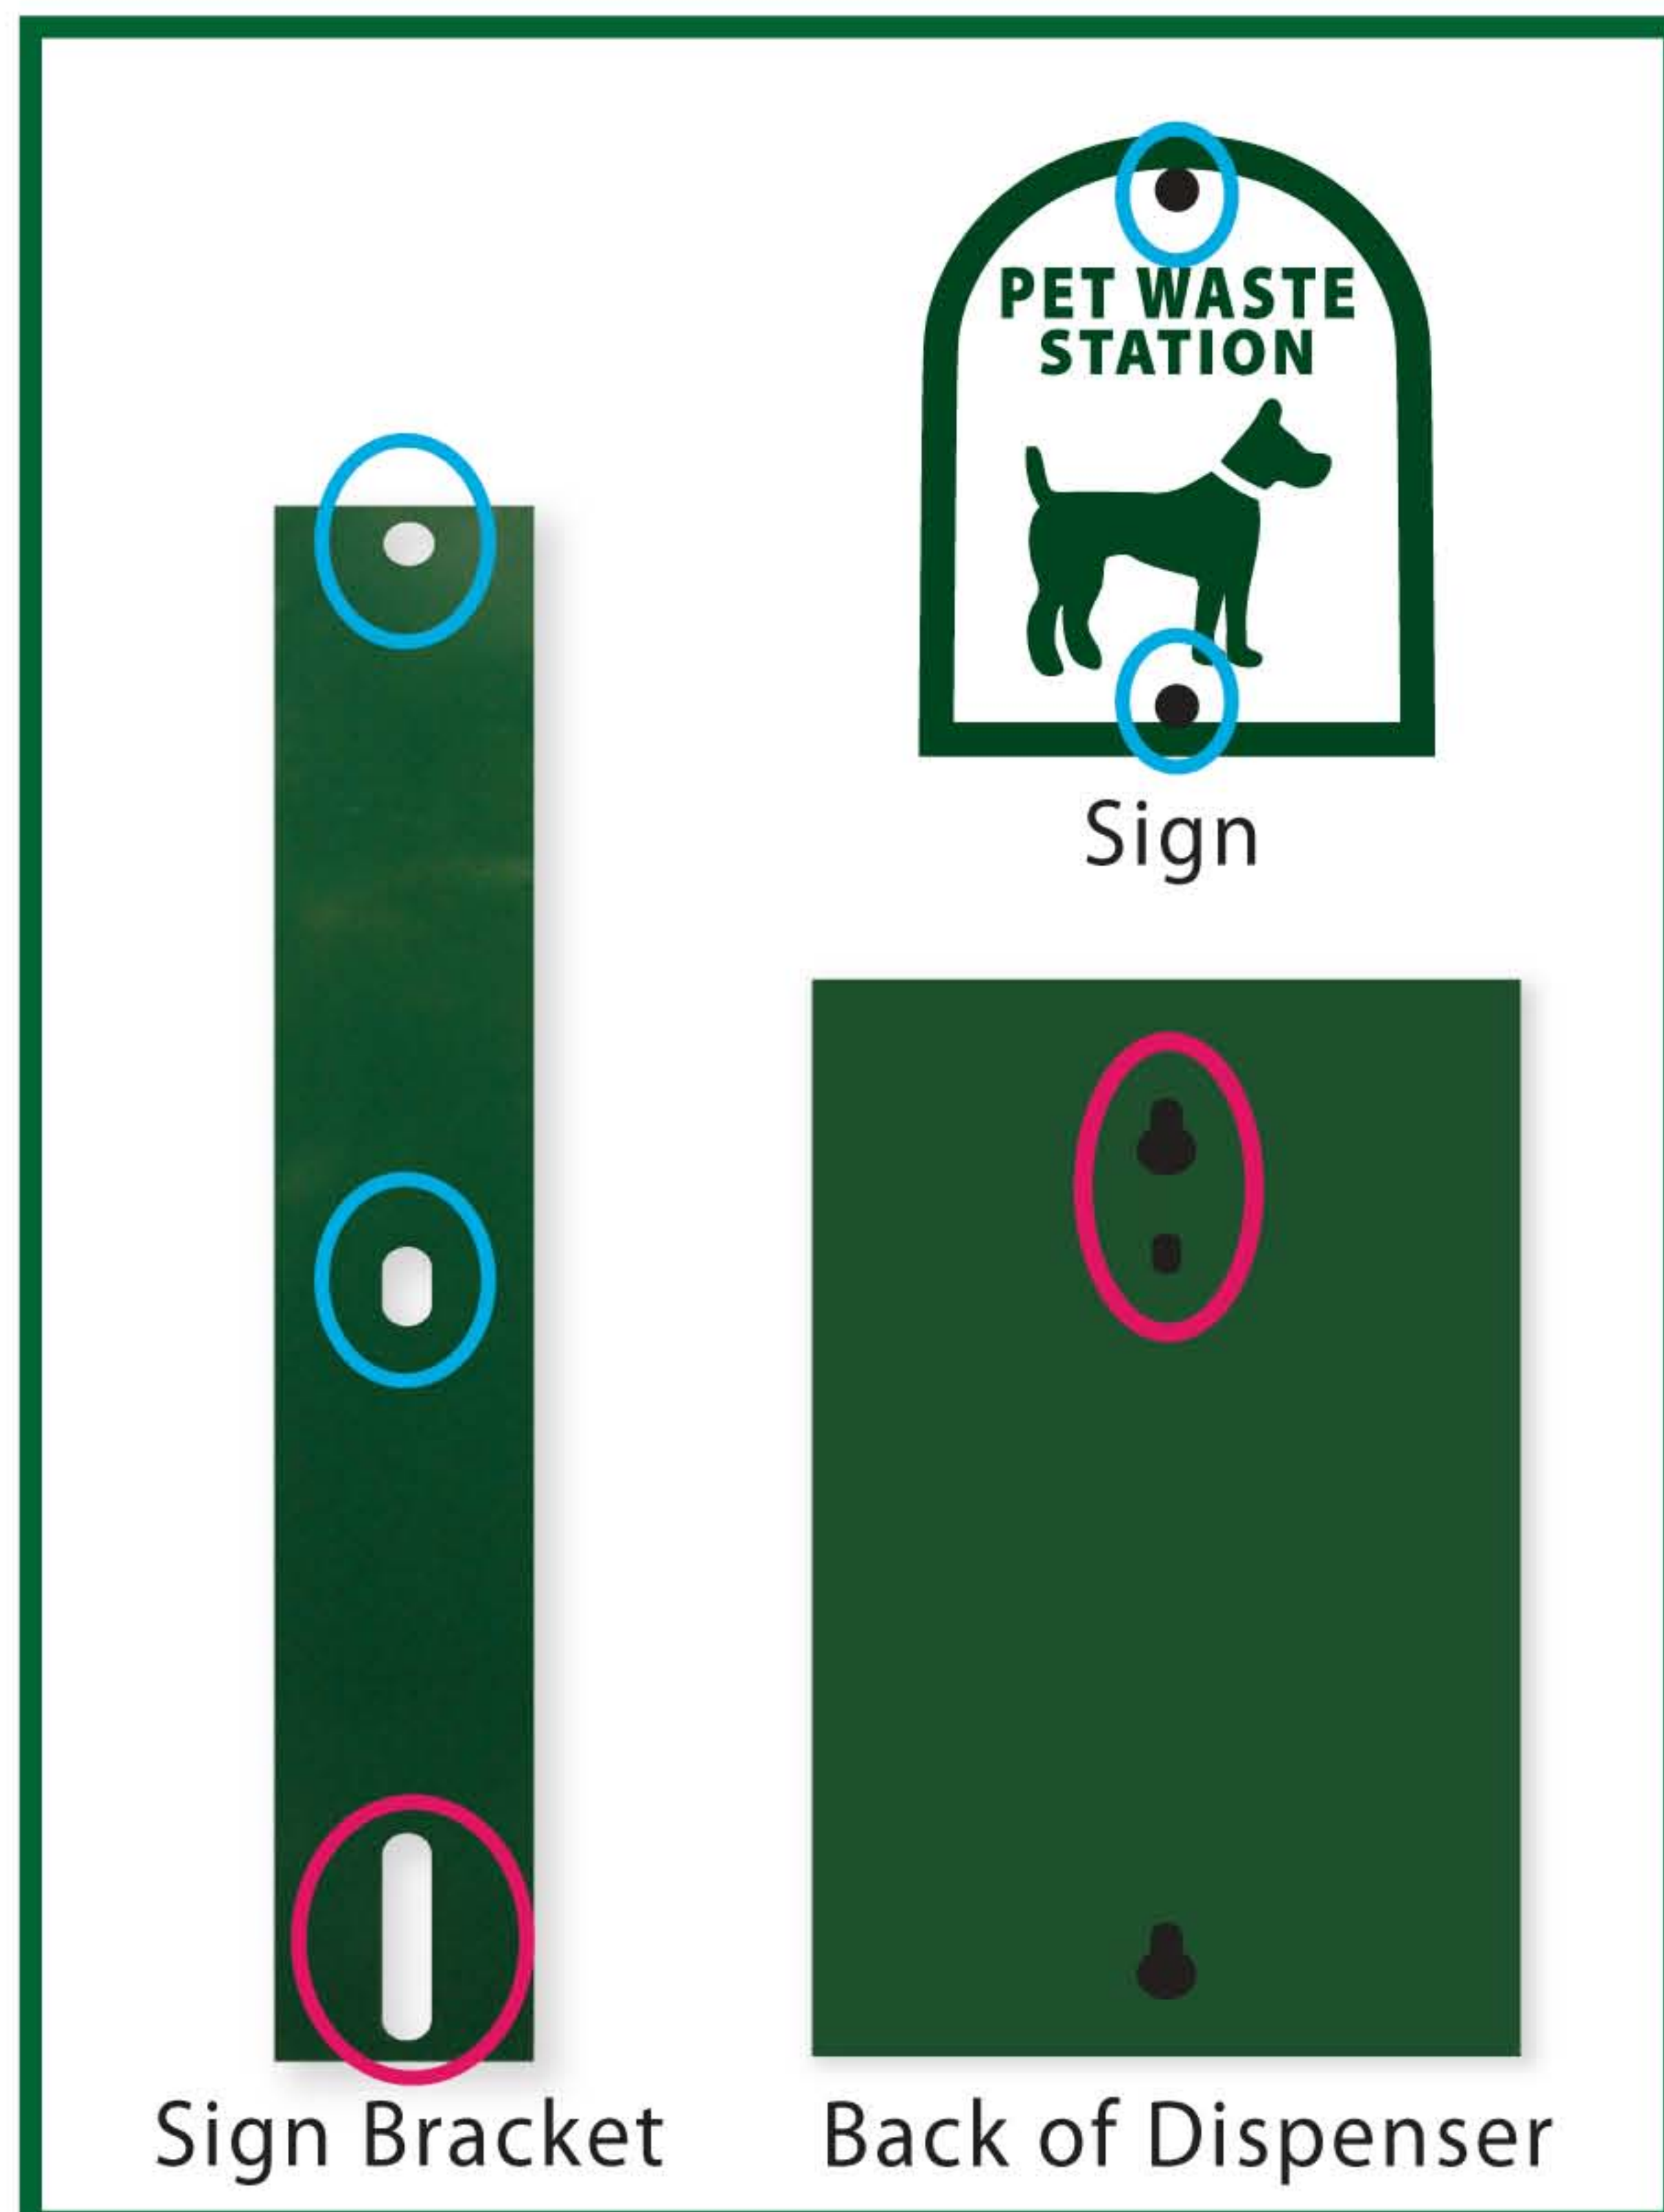

2. Place bolts through all 4 locations.

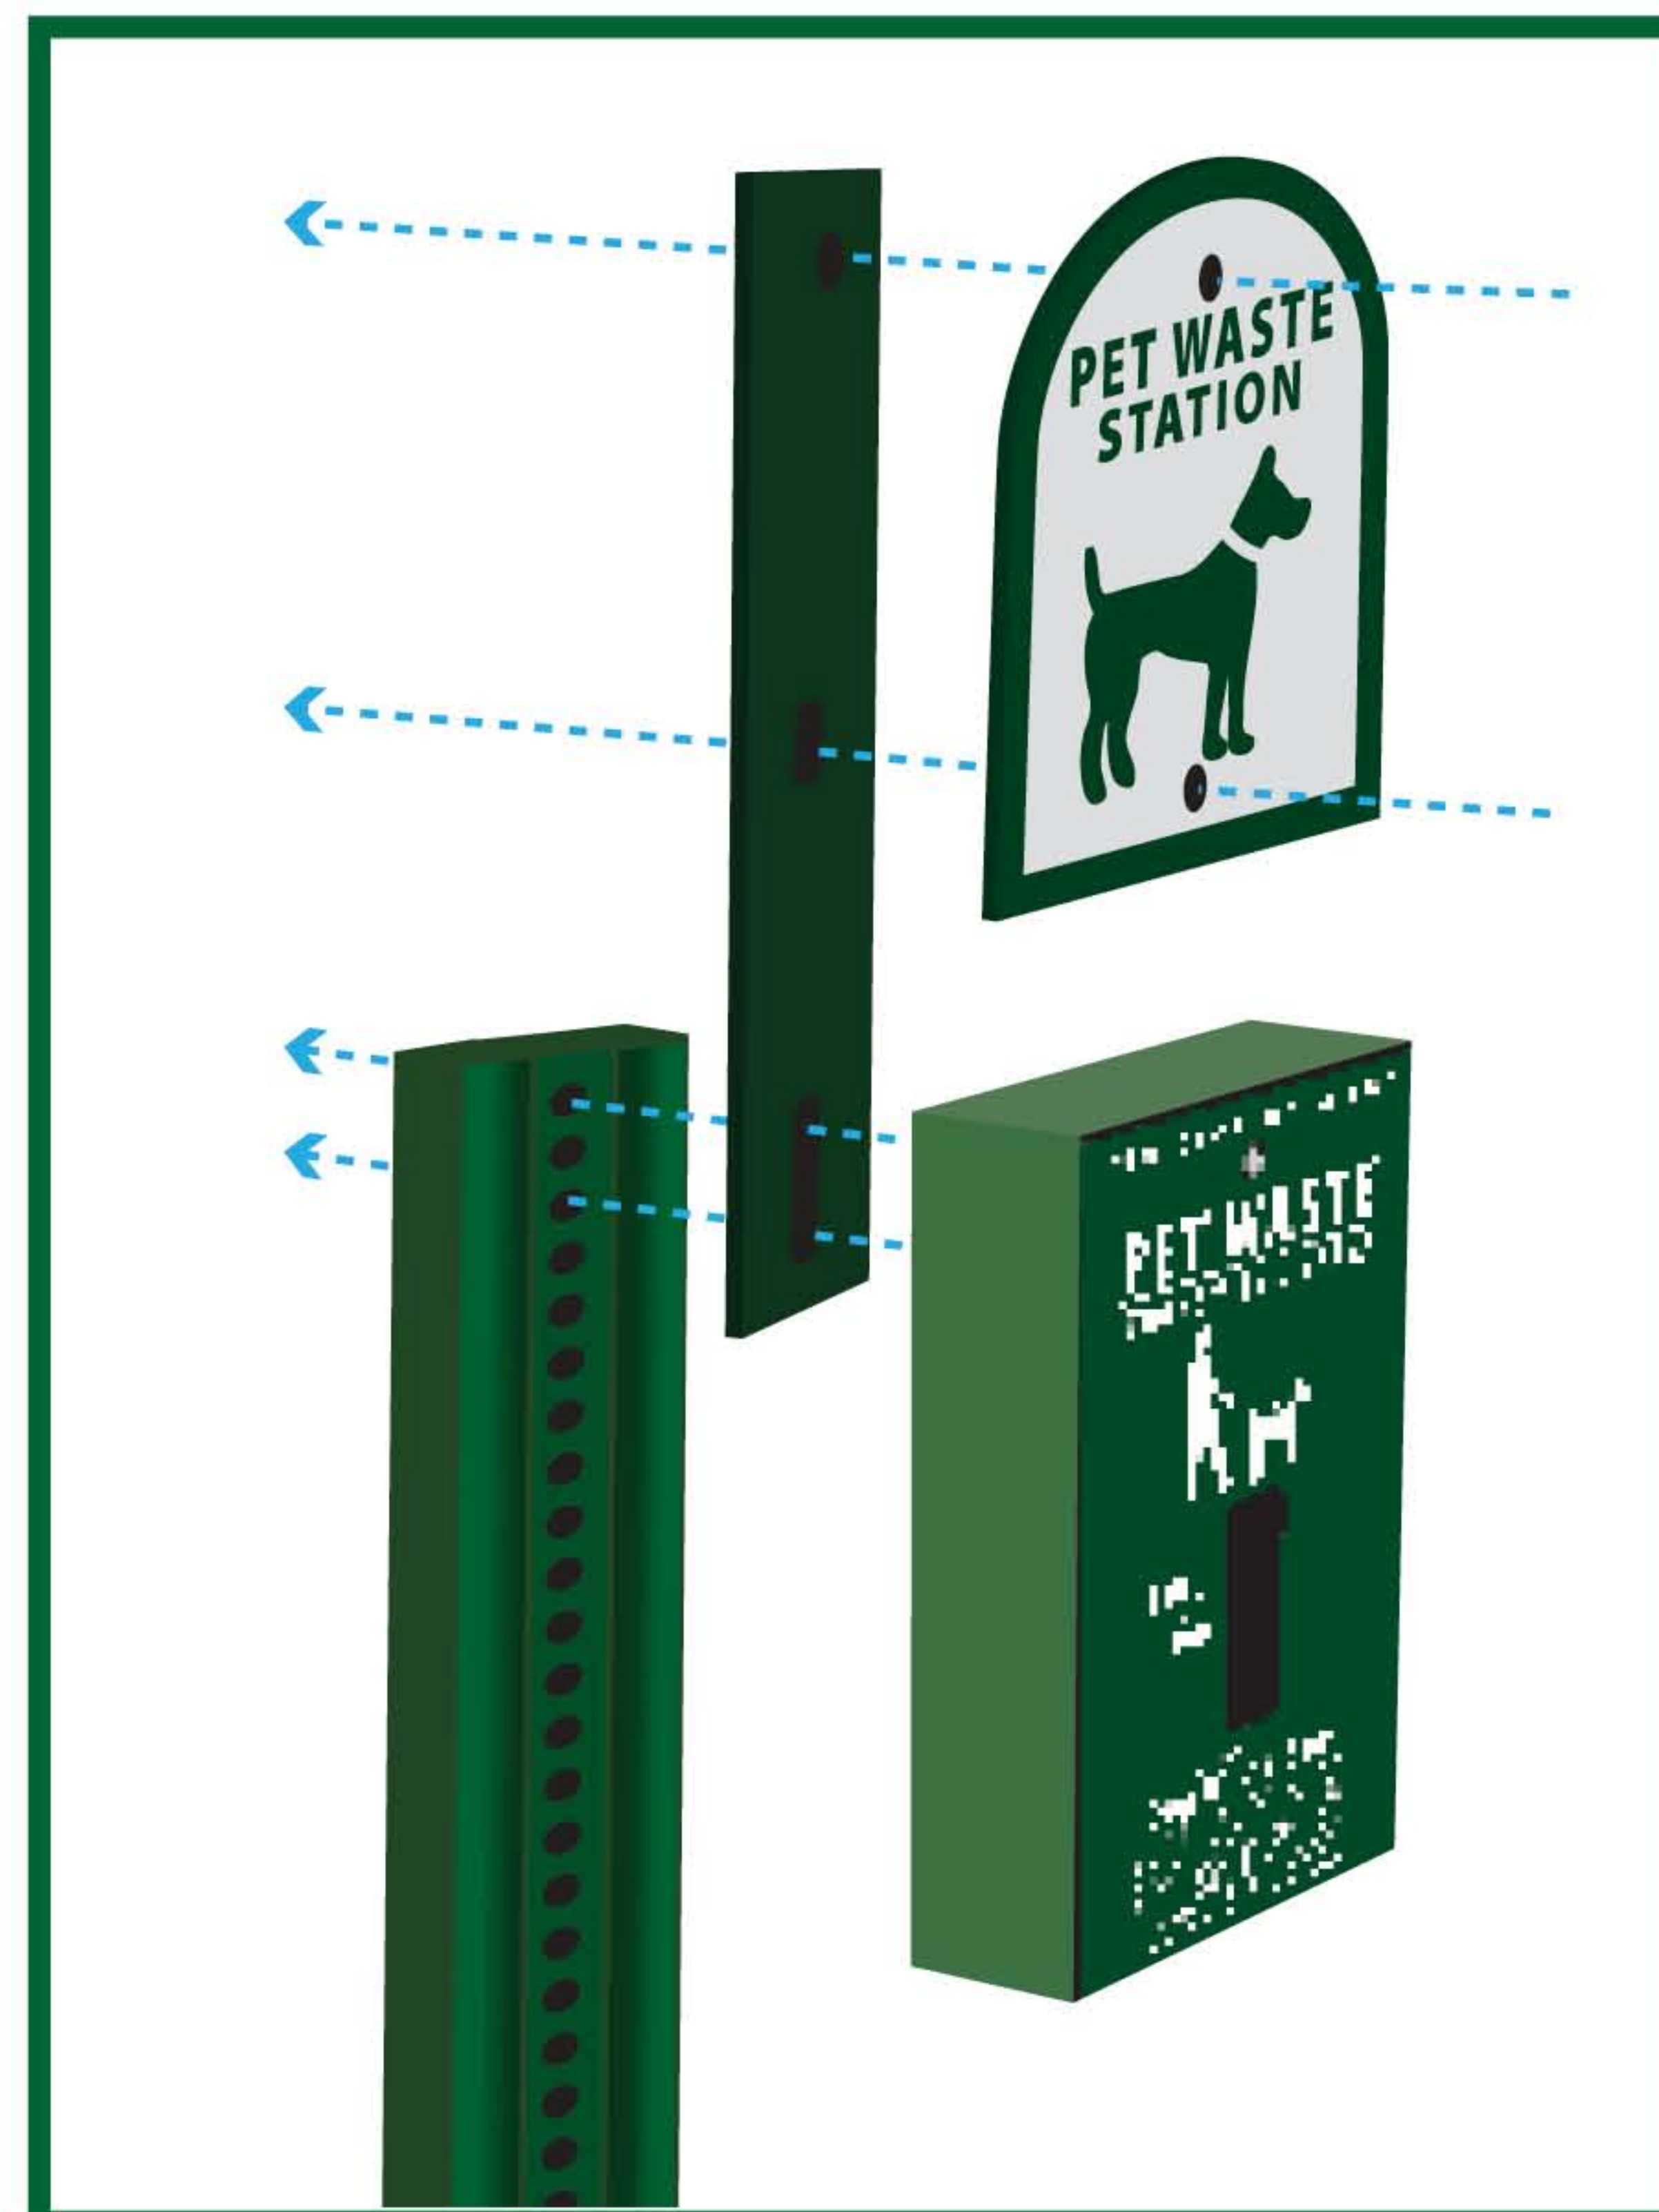

3. Tighen all nuts and bolts.



NOTE: Final product should have the Sign Bracket "sandwiched" between the Dispenser and the Post.

