

## THE MINI PET WASTE STATION

### PARTS LIST:


- Can (1)
- Post (1)
- Dispenser (1)
- Sign/Sign Bracket (1)
- Dispenser Keys (2)
- 400 Waste Bags
- 50 Can Liners
- Hardware Pack



DISPENSER (1)  
(Zero Waste OR ROLL Bag)



HARDWARE (1)

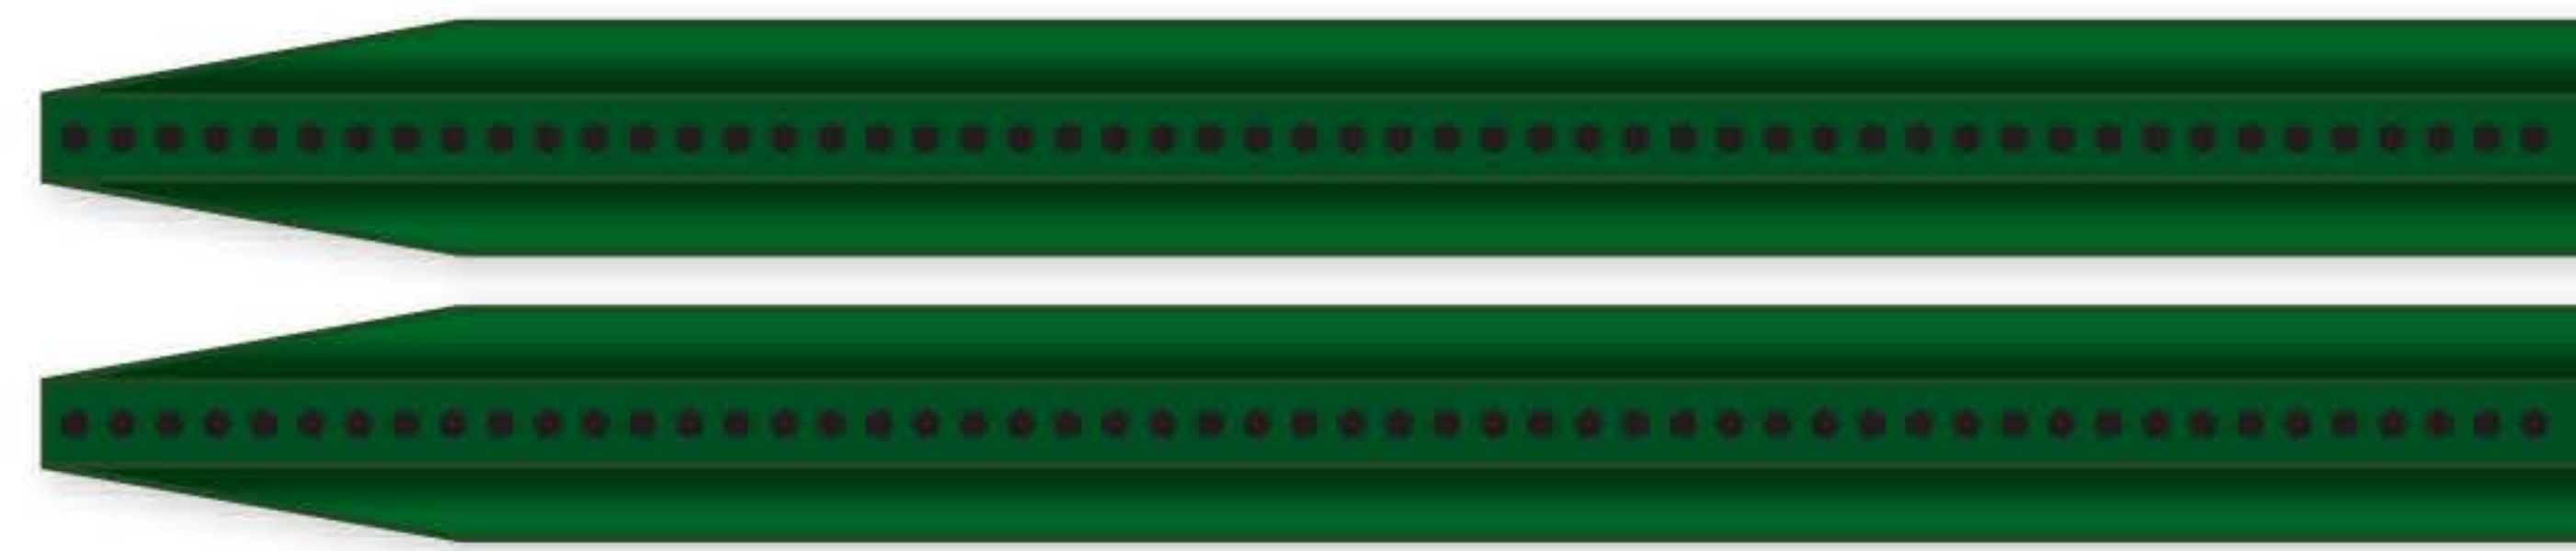

POST\* (1)  
\*2 Post Sections 45" Each

### ASSEMBLY ON REVERSE



SIGN(1) + BRACKET(1)



400 FREE BAGS



FREE CAN LINERS


### NUTS & BOLTS LIST:

- 2½" Bolt (3)
- A** 
- 1½" Bolt (2)
- B** 
- 1" Bolt (2)
- C** 
- Flat Washers (7)
- D** 
- Split-Lock Washer (7)
- E** 
- Hex Nuts (7)
- F** 



## MINI STATION ASSEMBLY INSTRUCTIONS

- 1. ASSEMBLE POST:** overlap post one tapered-end 6" onto the flat end of post two. Thread 2 bolts (C) with 2 flat washers (D) to connect. Tighten with nuts and lock washers (E, F).
- 2. Mark Assembled Post 18" from tapered end:** bury the post in concrete level to 18" mark.
- 3. ATTACH DISPENSER:** Use *THREE* bolts from inside the dispenser to secure the dispenser and the sign bracket to the post: Open the DISPENSER. Align the SIGN BRACKET's long slot with the top 2 holes of the dispenser and use 2 bolts (B) & flat washers (C) from the INSIDE of the dispenser to bolt thru the bracket, thru the post, and secure in the back of the post with lock washer (E) and nuts (F) *\*see diagram on reverse.* Use a third bolt (A), flat washer (C), & lock washer (E) & nut (F) at the bottom hole of the dispenser to attach to post.
- 4. ATTACH SIGN:** Bolt sign to the top of the SIGN BRACKET and secure with washers, lock washers and nuts.
- 5. FILL DISPENSER** with bags, and install can liner.

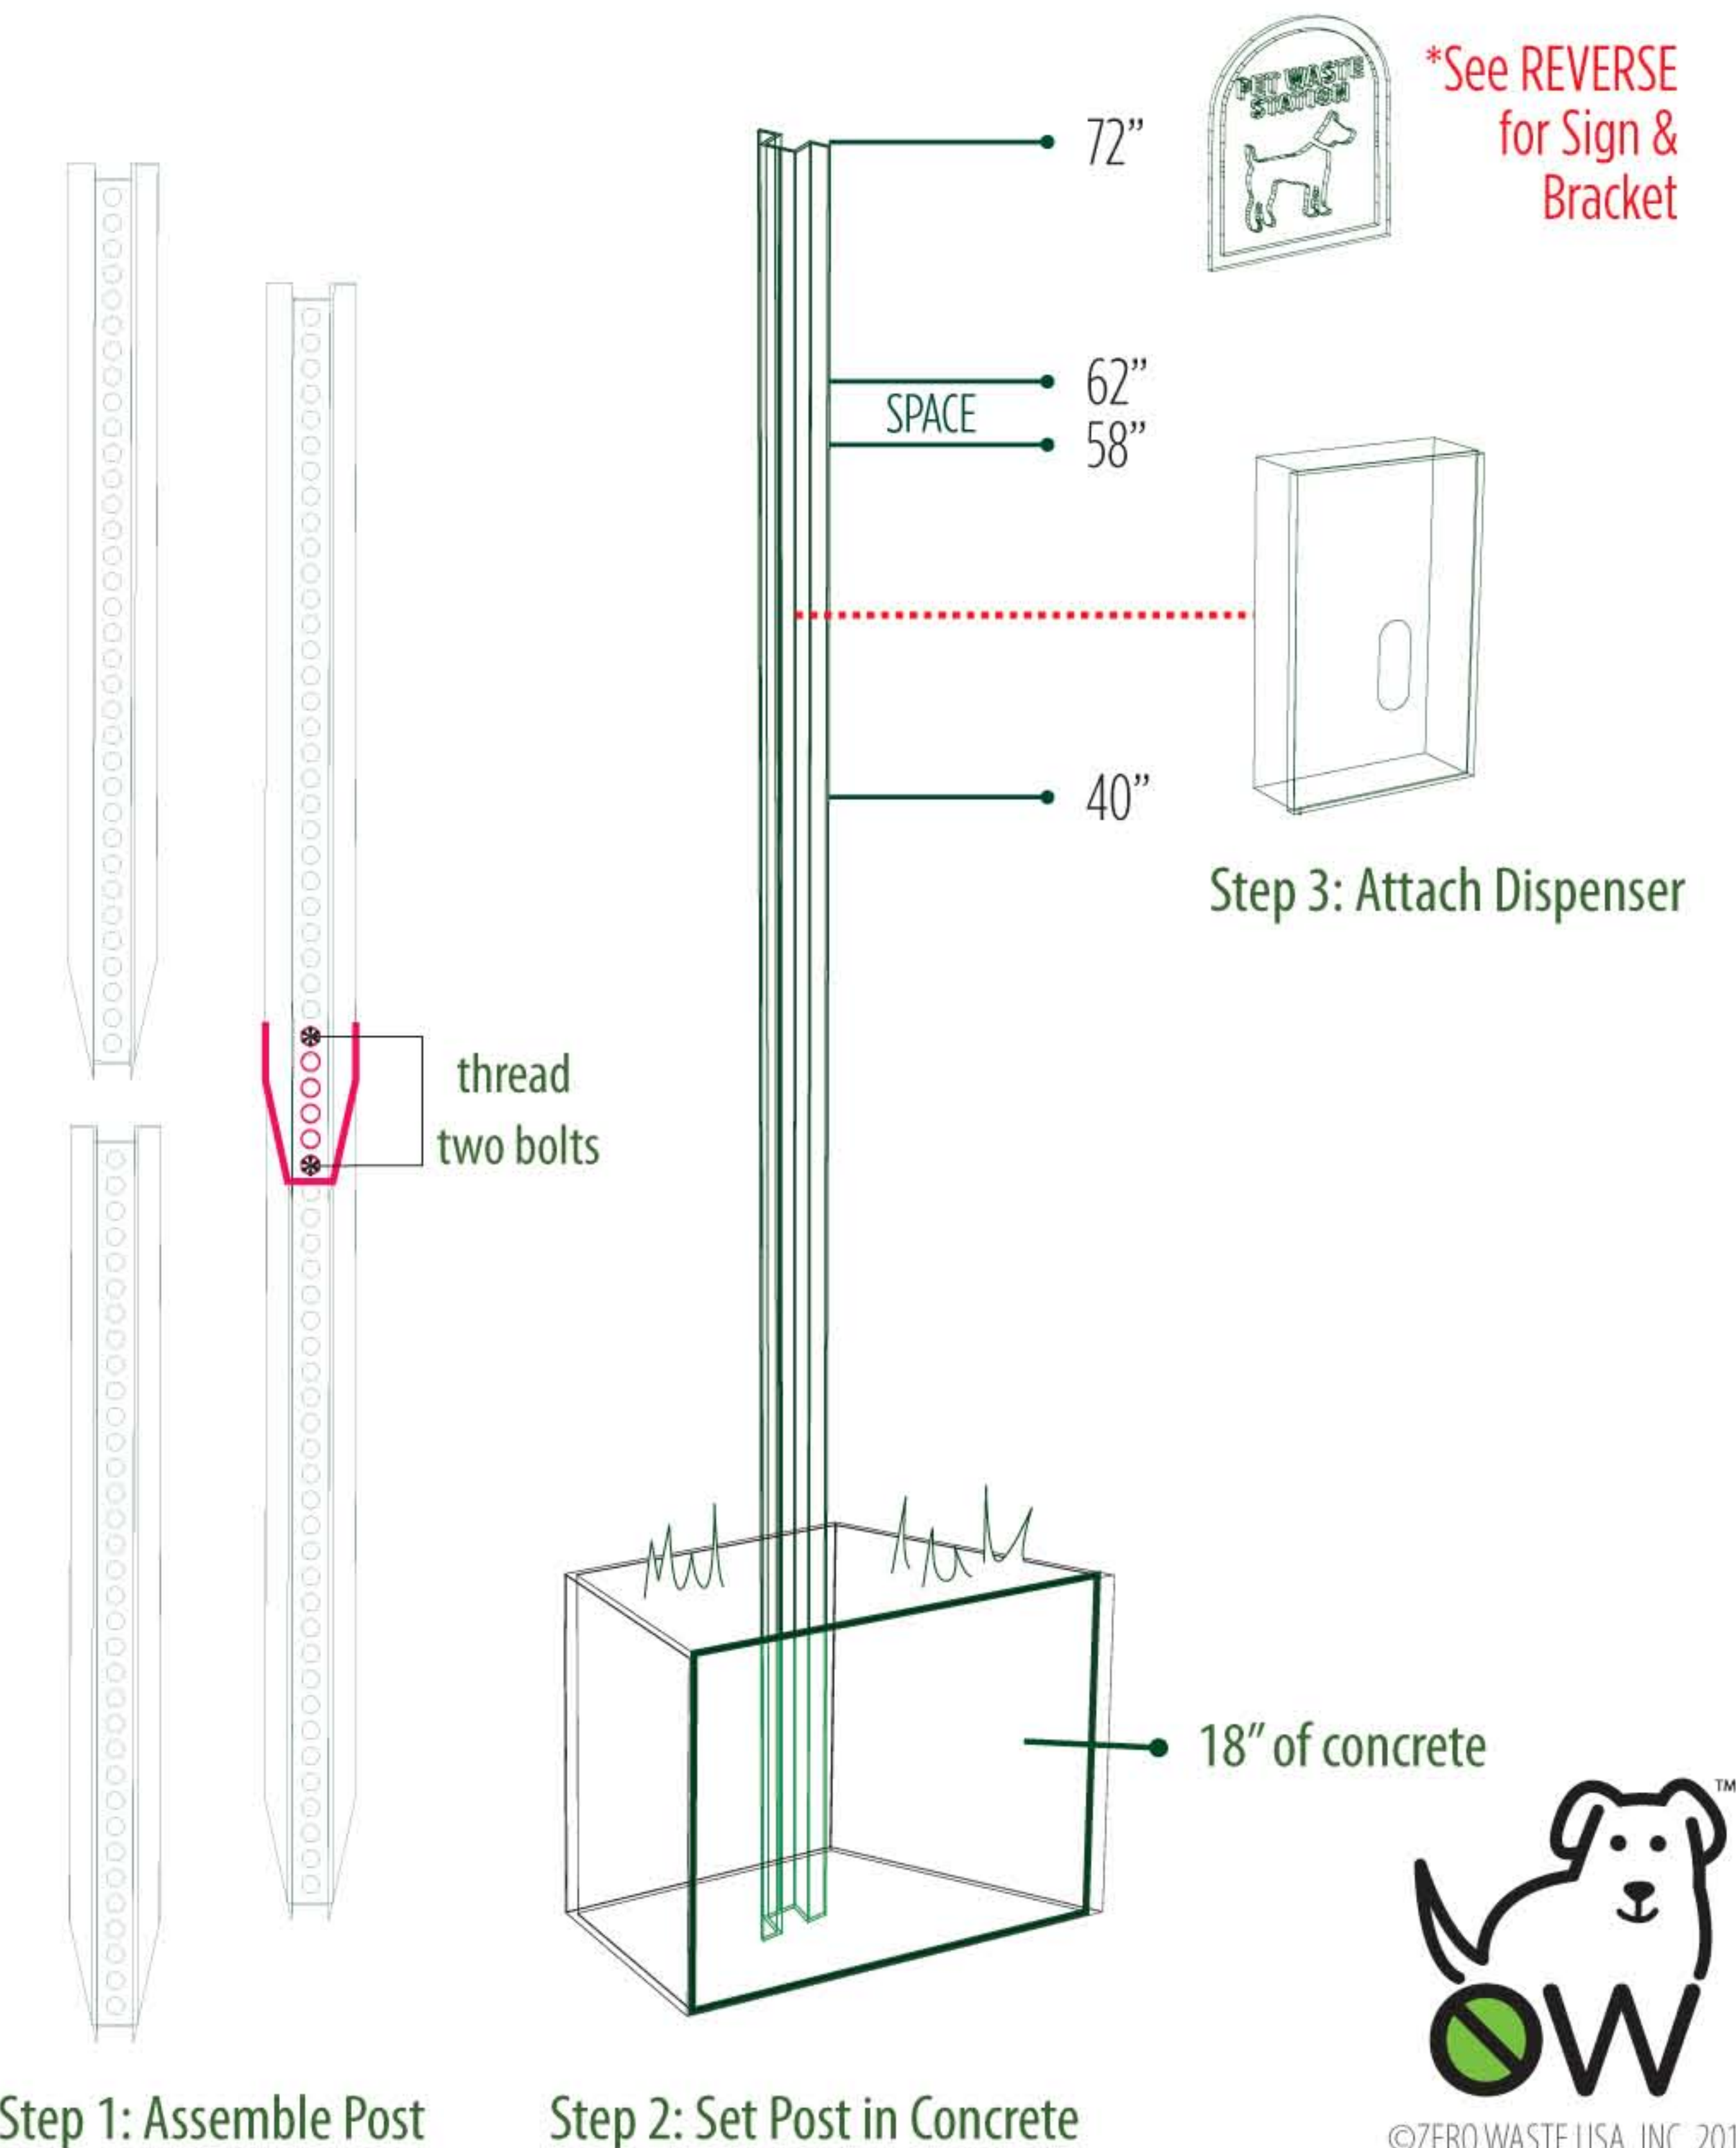


**ZERO WASTE SIGN KIT**

**PARTS LIST:**

- Sign(1)
- Sign Bracket (1)



SIGN(1)

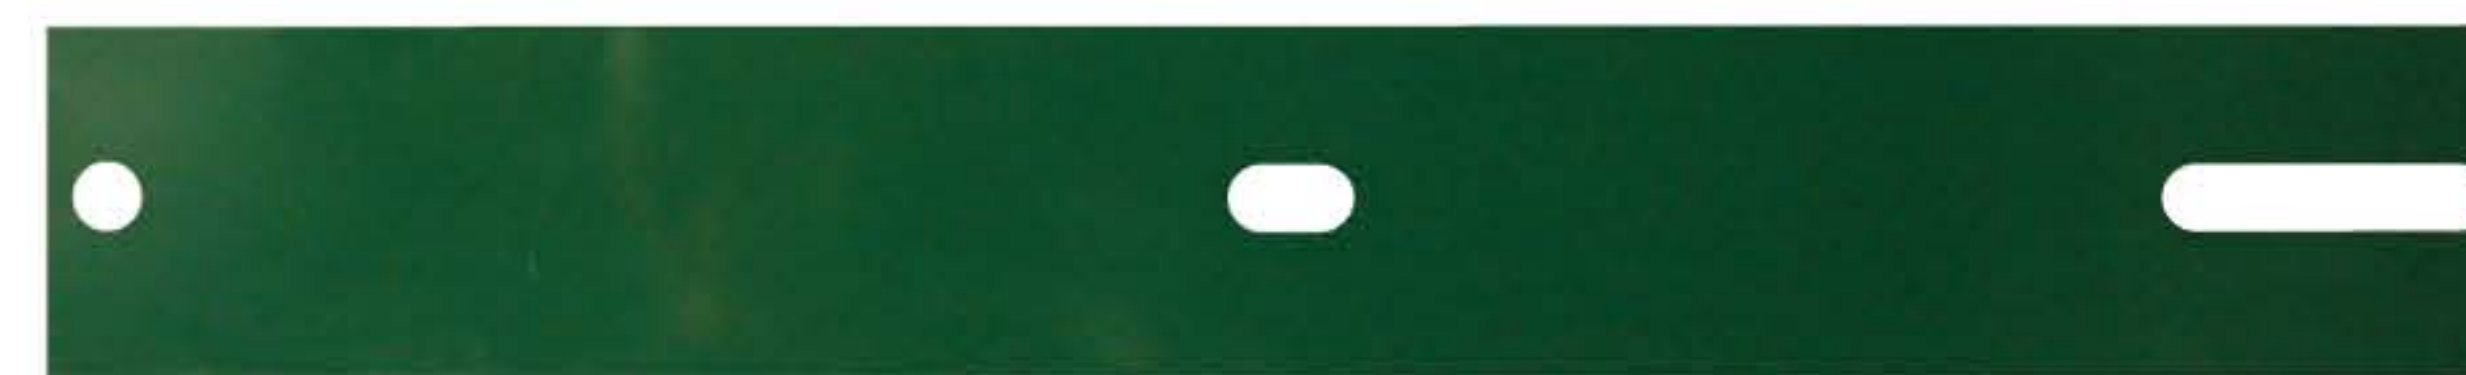


BRACKET(1)

**NUTS & BOLTS LIST:**


- 1½" Bolt (3)
  - F** 
- Flat Washer (3)
  - G** 
- Split-Lock Washer (3)
  - H** 
- Hex Nuts (3)
  - I** 

**SIGN KIT ASSEMBLY INSTRUCTIONS**

1. Align all matching holes.

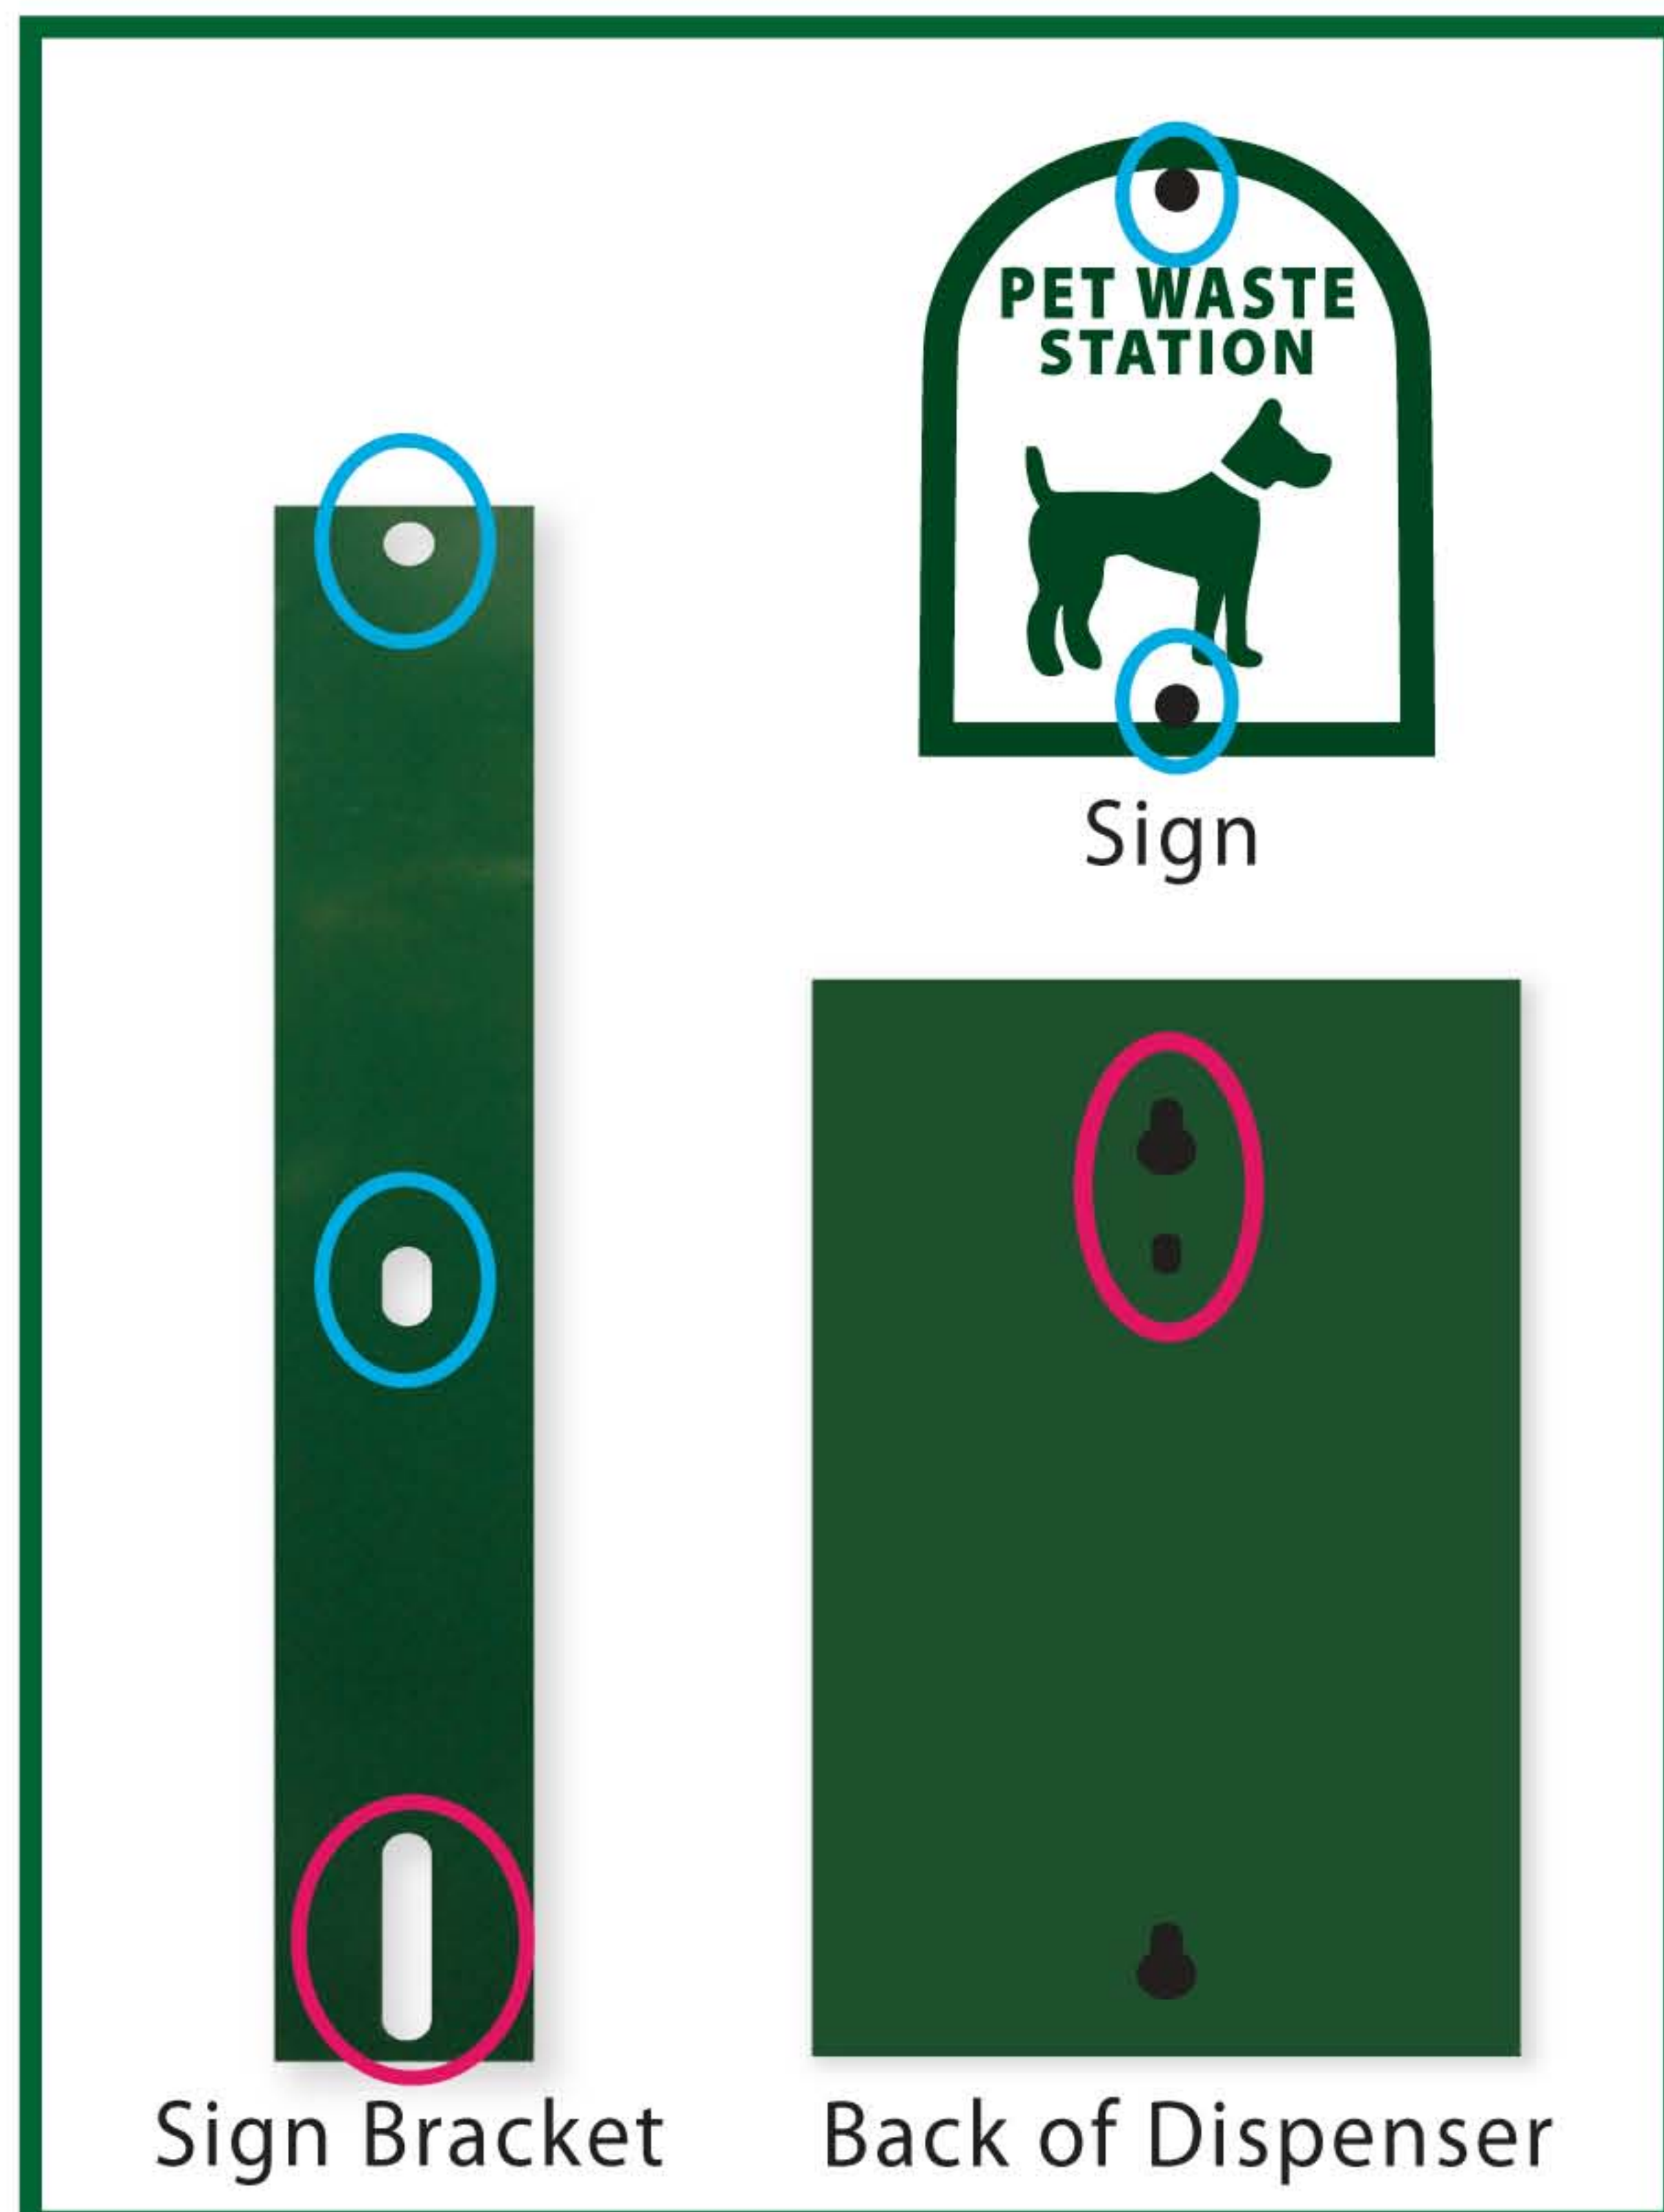

2. Place bolts through all 4 locations.

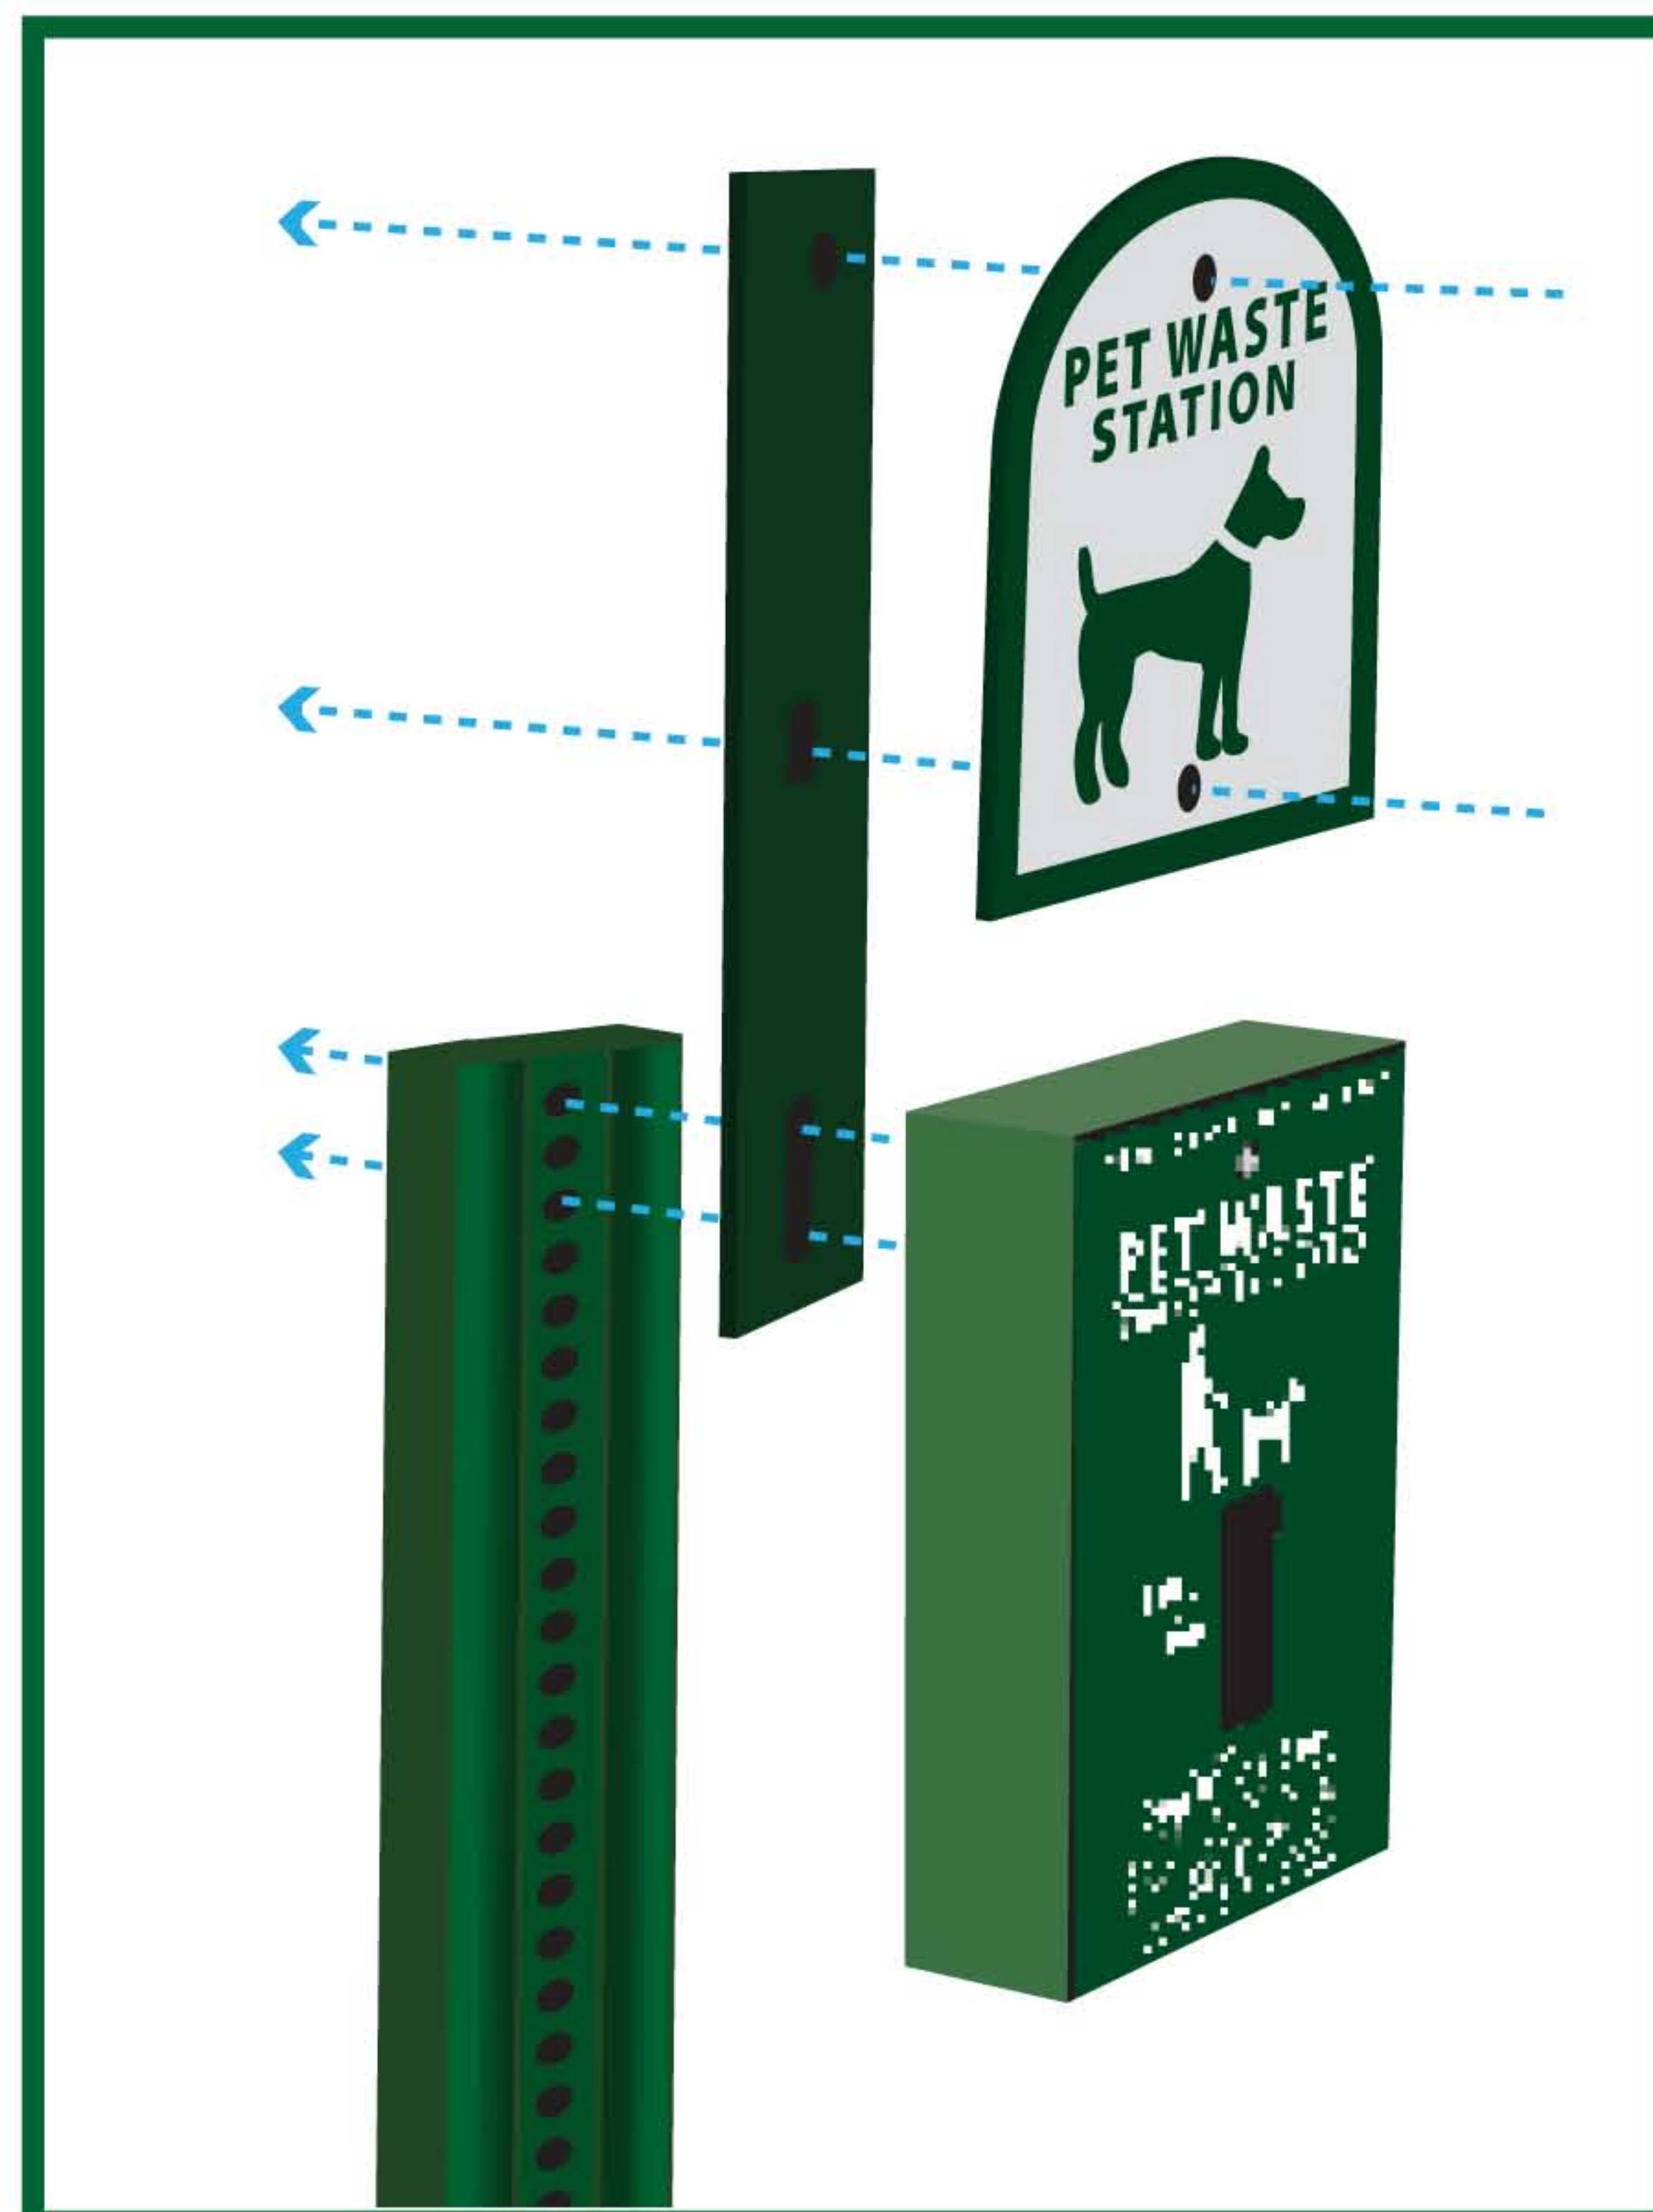

3. Tighen all nuts and bolts.



NOTE: Final product should have the Sign Bracket "sandwiched" between the Dispenser and the Post.

