

THE SENTRY® PET WASTE STATION

PARTS LIST:

- Can (1)
- Post (1)
- Dispenser (1)
- Sign/Sign Bracket (1)
- Spacer (1)
- Hardware Pack (1)
- Dispenser Keys (2) *INSIDE Dispenser
- 400 FREE BAGS
- FREE CAN LINERS



NUTS & BOLTS LIST:

- 3" Bolt (2)
- A**
- 2 1/4" Bolt (3)
- B**
- 1" Bolt (2)
- C**
- Flat Washers (7)
- D**
- Split-Lock Washer (7)
- E**
- Hex Nuts (7)
- F**

THE SENTRY® PET WASTE STATION ASSEMBLY INSTRUCTIONS



1. **ASSEMBLE POST:** overlap post one tapered-end 6" onto the flat end of post two. Thread 2 bolts (C) with 2 flat washers (D) to connect. Tighten with nuts and lock washers (E, F).
2. Mark Assembled Post 18" from tapered end: bury the post in concrete level to 18" mark.
3. **ATTACH CAN:** Install 6" above ground; thread the 2 bolts (A) with 2 flat washers (D) through the can from the inside. Line up the bolts with holes in the post (6" above ground) and thread through.
Note: place "Spacer" between the can and the post to level can. (difference of post overlap) tighten with nuts and lock washers (E, F).
4. **ATTACH DISPENSER:** mount the dispenser to the top of the post. Open the dispenser and line up top dispenser hole with top post hole; second dispenser hole automatically aligns. Thread both bolts (B) from the inside of the dispenser: Be sure to put flat washer (D) on the bolts before you thread the bolts through the dispenser & post. Secure with nuts and lock washers (E, F).
***SEE REVERSE TO ATTACH SIGN**

PLEASE BE SURE TO TIGHTEN ALL NUTS AND BOLTS SECURELY

5. Fill Dispenser with bags—Install Can Liner.

***SEE REVERSE* TO ATTACH BRACKET & SIGN**




ZERO WASTE SIGN KIT

PARTS LIST:

- Sign(1)
- Sign Bracket (1)



SIGN(1)

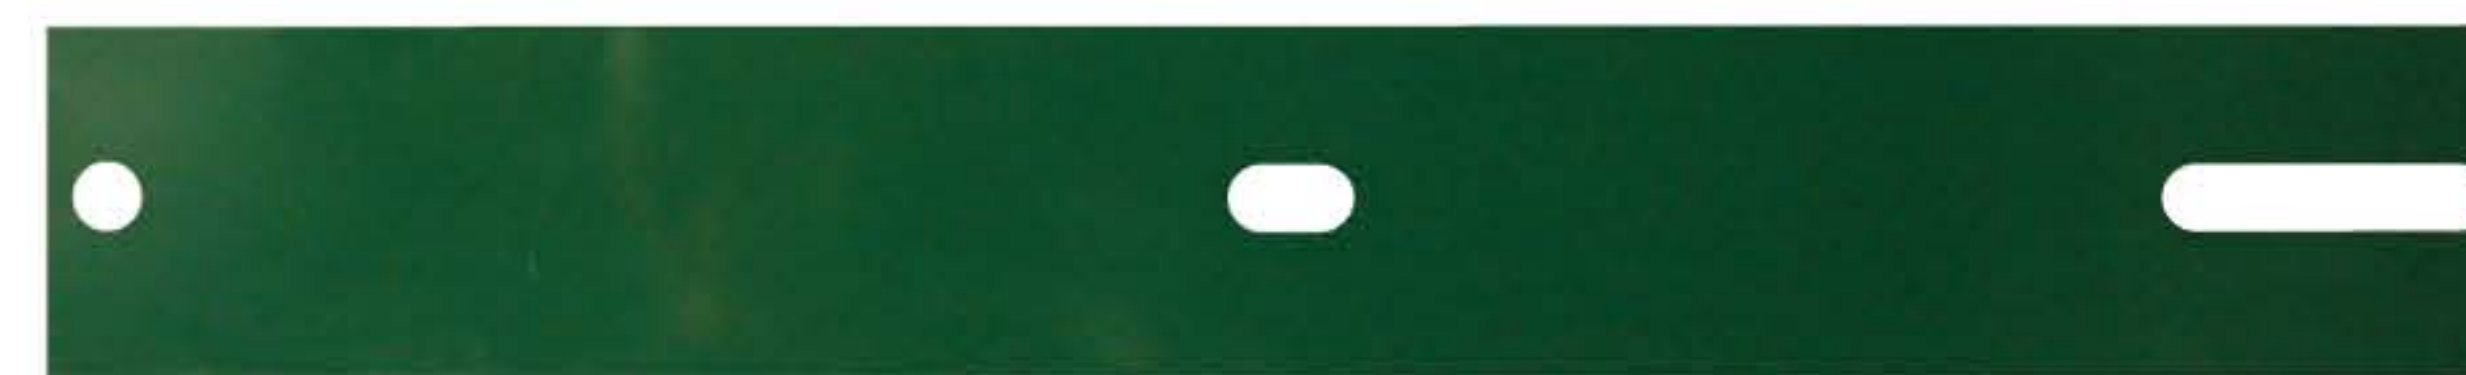


BRACKET(1)

NUTS & BOLTS LIST:


- 1½" Bolt (3)
 - F** 
- Flat Washer (3)
 - G** 
- Split-Lock Washer (3)
 - H** 
- Hex Nuts (3)
 - I** 

SIGN KIT ASSEMBLY INSTRUCTIONS

1. Align all matching holes.

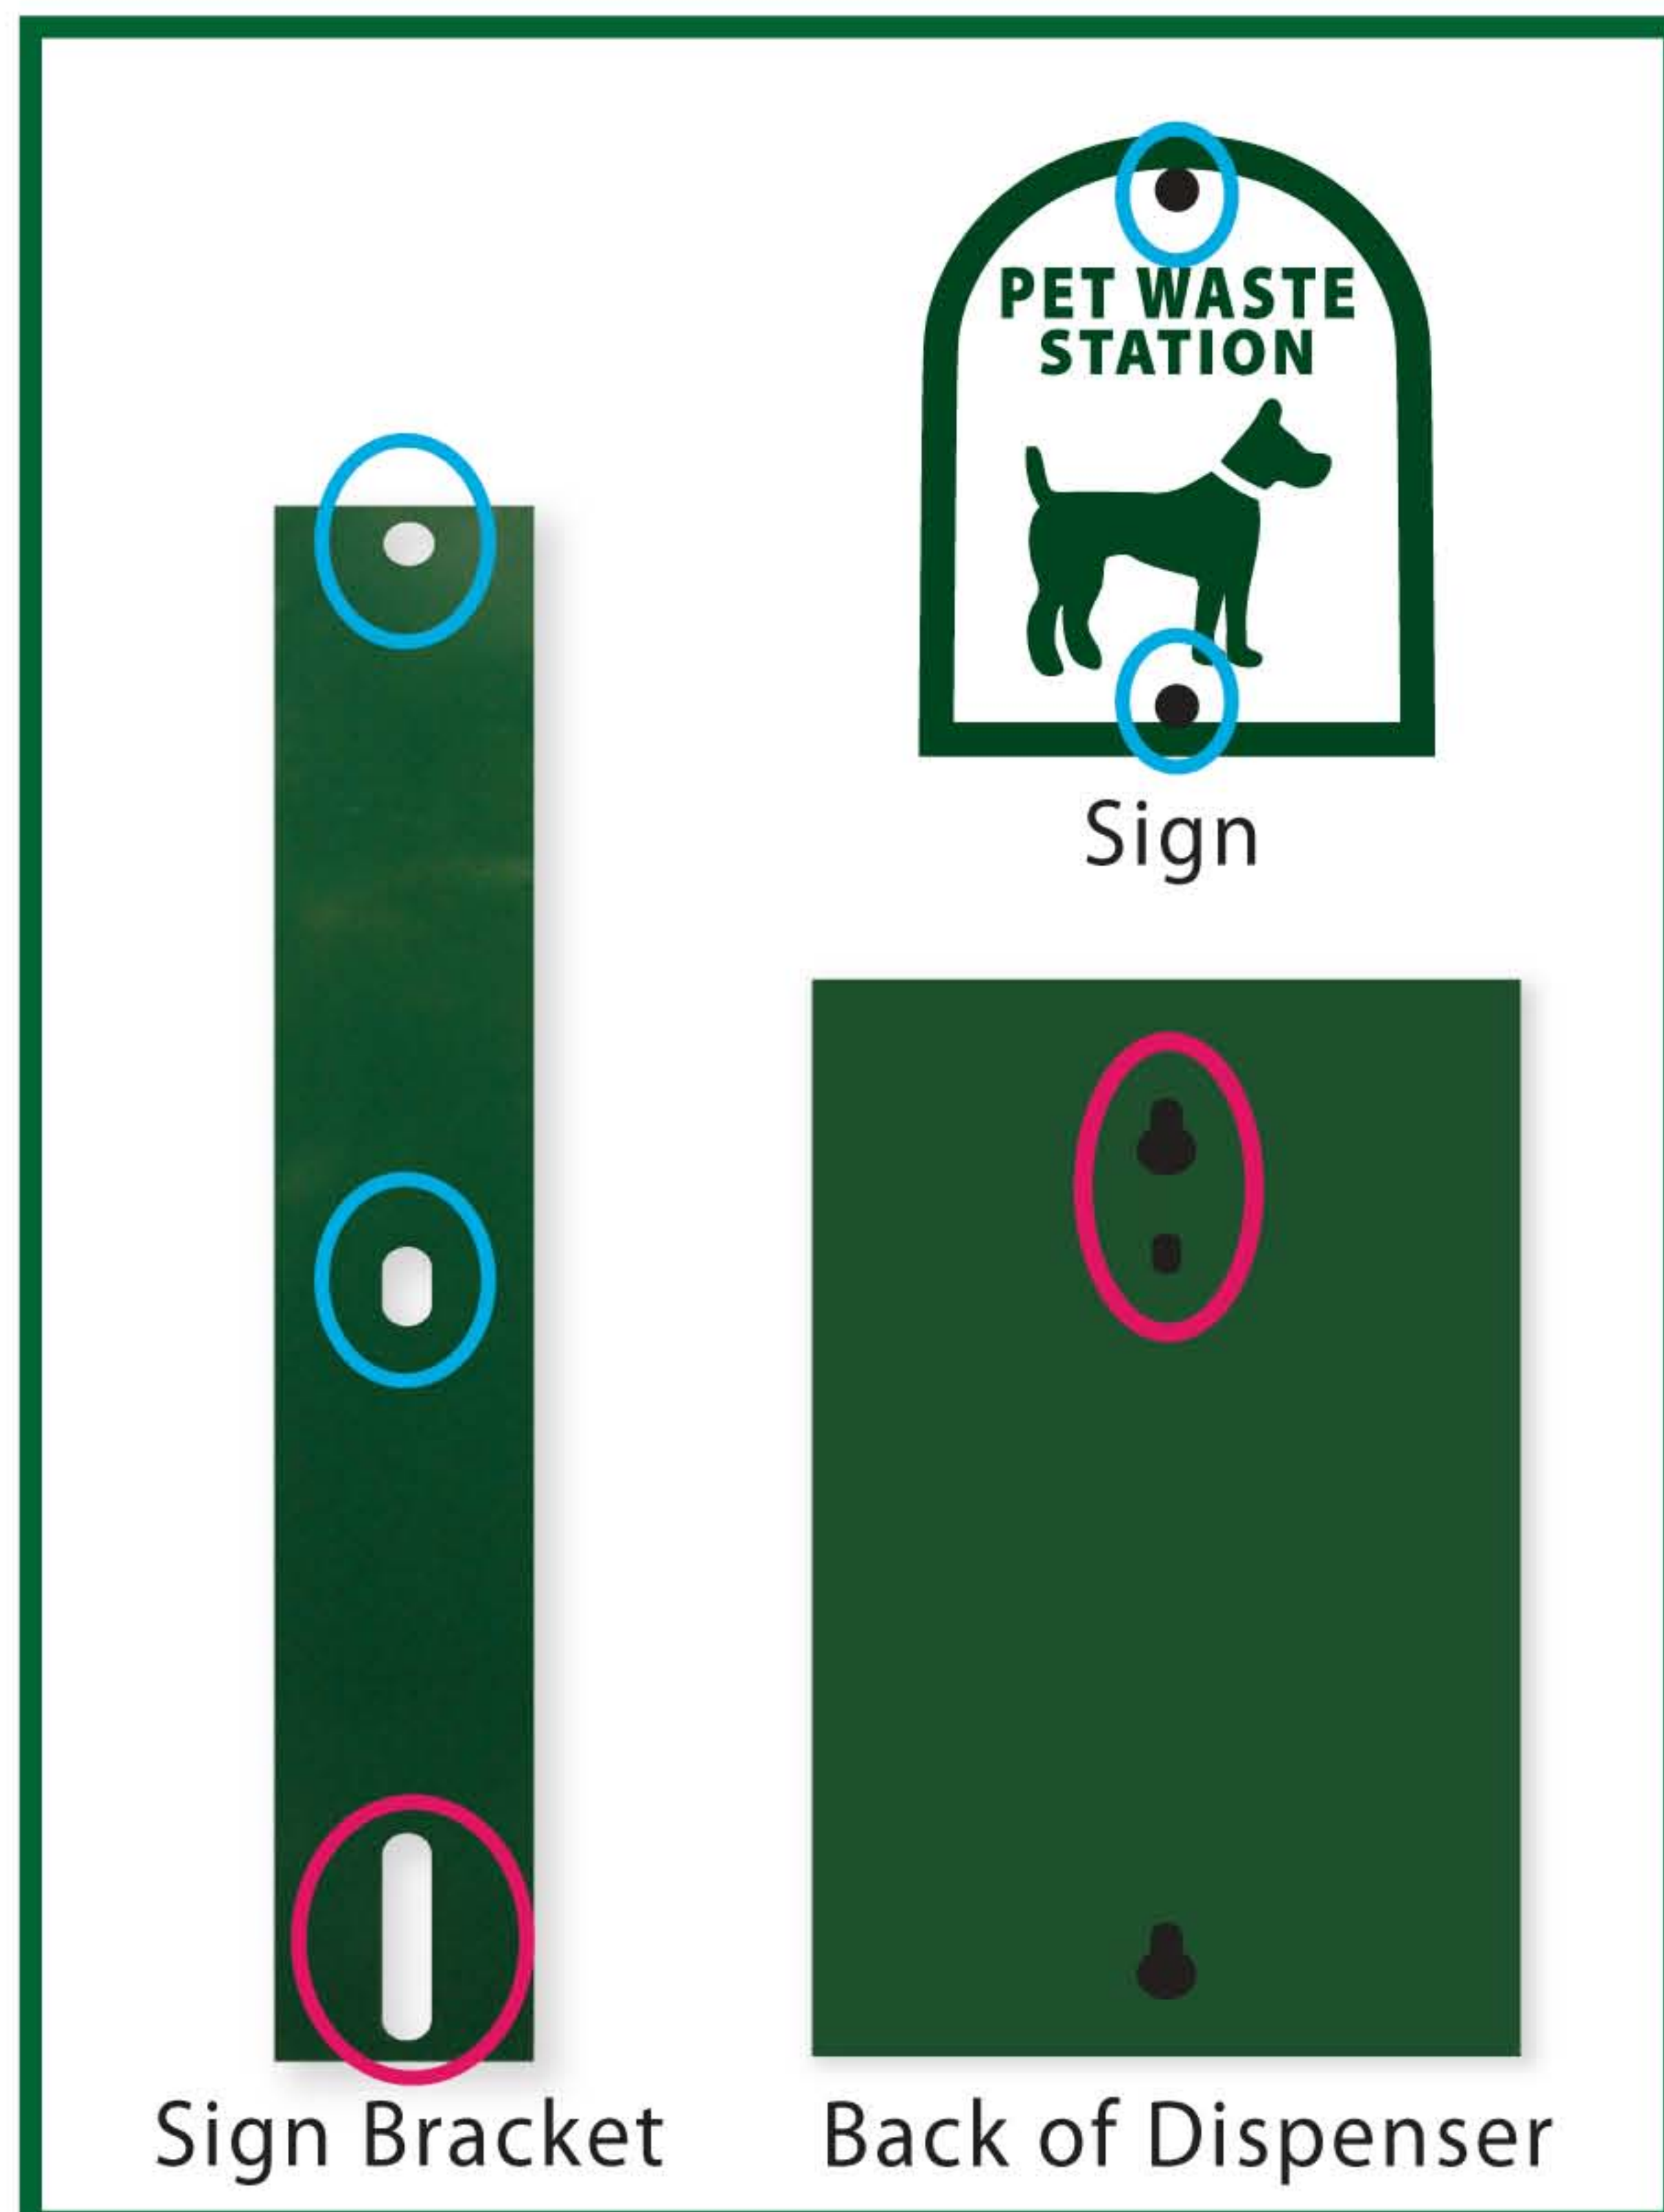

2. Place bolts through all 4 locations.

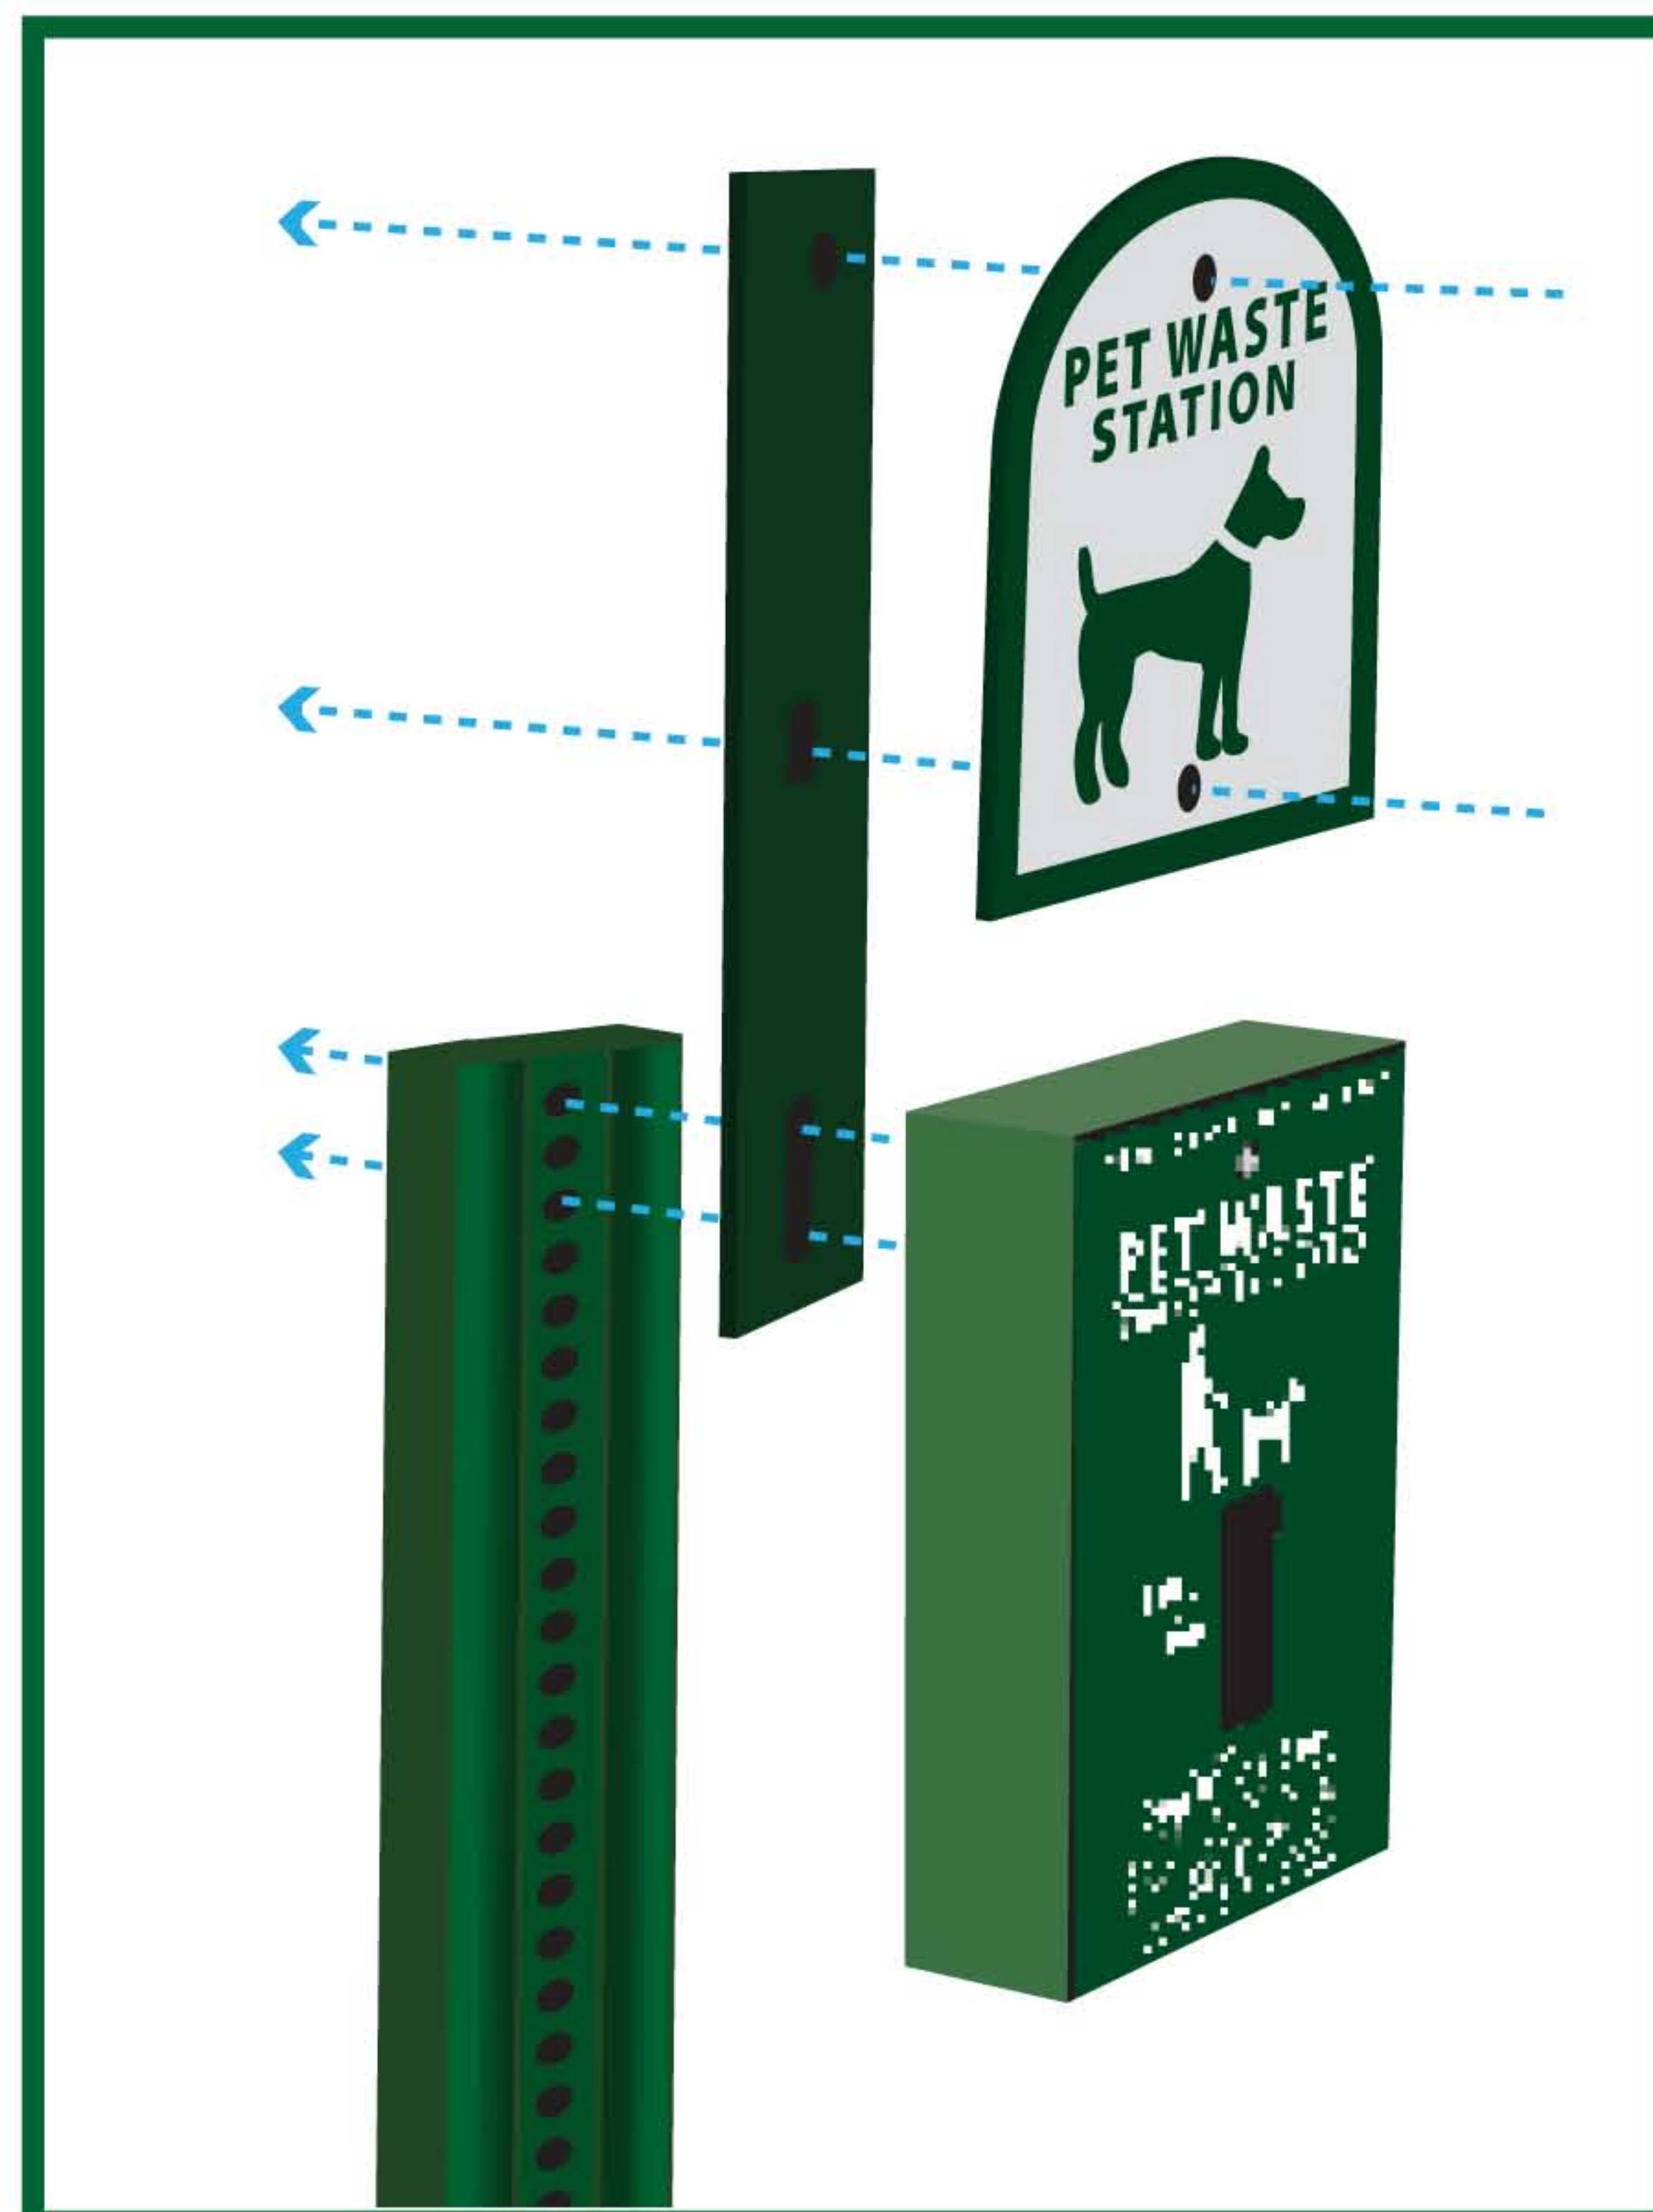

3. Tighen all nuts and bolts.



NOTE: Final product should have the Sign Bracket "sandwiched" between the Dispenser and the Post.